 
 



 





 

 

 
 





 




Original	Replacement	Original	Replacement
 Power	 Power	 EPG	 Guide
 Info	 Info	 Recall	 Back
 Mute	 Mute	 Freeze	 Pause
 P.Mode	 Shift + Format	 Sleep	 Sleep
 S.Mode	 Dual	 Menu	 Menu
 Nicam	 Shift + Dual	 Source	 AV
 Aspect	 Format	 Up	 Up
 1	 1	 Right	 Right
 2	 2	 Down	 Down
 3	 3	 Left	 Left
 4	 4	 OK	 Ok
 5	 5	 Vol -	 Vol -
 6	 6	 Vol +	 Vol +
 7	 7	 CH -	 Ch -
 8	 8	 CH +	 Ch +
 9	 9	 Ttxt / Repeat	 Text
 0	 0	 Hold / A-B	 Shift + Pause





Original		Replacement		Original		Replacement	
	Mix / Language	 + 	Shift + Text		Rec / Open/Close		Rec
	Subtitle /		Subt		T-Shift		3D
	Index / Setup		Options		Page Up / I<<		I<<
	Size / DVD		D. Menu		Page Down / >>I		>>I
	Reveal / Title		Smart				
	Cancel / Exit / Zoom		Exit				
	Red / Program		Red				
	Green / Goto		Green				
	Yellow / Angle		Yellow				
	Blue / D.Dis		Blue				
	Play / Pause		Play				
	List / Stop		Stop				
	List / Stop		List				
	DTV/Radio / <<<		TV/R				
	DTV/Radio / <<<		<<<				
	Fav / >>>		Pre Ch				
	Fav / >>>		>>>				

