




 




 

 





 













Original	Replacement
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	Shift + Info / Angle
	Setup / OPT /

Original	Replacement
	Display / Media
	Smart / List
	Mute / Dimmer
	Info / Angle
	Back / Return
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Guide / EPG / -/--
	D.Menu / Top
	Text / Goto





	Original	Replacement	Original	Replacement
	 TXT/Menu	 Menu / Home		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 [ <> ]	 Shift + Zoom /		
	 Rec/l>	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 Stop	 Stop / Hold		
	 l<	 l<< / Preset-		
	 >l	 >>l / Preset+		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		






 




 

 





 













Original	Replacement
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	+  Shift + Info / Angle
	Setup / OPT /

Original	Replacement
	Display / Media
	Smart / List
	Mute / Dimmer
	Info / Angle
	Back / Return
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Guide / EPG / -/--
	D.Menu / Top
	Menu / Home





Original	Replacement	Original	Replacement
 TXT/Menu	 Text / Goto		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		
 [ <> ]	 Shift + Zoom /		
 Rec/ >	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
  <	  << / Preset-		
 >	 >>  / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		





Original	Replacement
	Power
	1
	2
	3
	4
	5
	6
	7
	8
	9
	0
	AV / Input / RDS
	Zoom / Size
	Subtitle / EQ
	Audio / Lang I/II
	+  Shift + Info / Angle
	Setup / OPT /

Original	Replacement
	Display / Media
	Smart / List
	Mute / Dimmer
	Info / Angle
	Back / Return
	CH+ / Page+
	Up
	Vol-
	Left
	OK
	Right
	Vol+
	Down
	CH- / Page-
	Guide / EPG / -/--
	D.Menu / Top
	Text / Goto





Original	Replacement	Original	Replacement
	TXT/Menu		Menu / Home
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	[<>]		Shift + Zoom /
	Rec/l>		Rec / Rec Mode
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	Stop		Stop / Hold
	<		<< / Preset-
	>		>>  / Preset+
	<<		<< / Tune-
	>>		>> / Tune+




 

 
 
 
 




















Original	Replacement	Original	Replacement
	Power		ECO
	1		Display / Media
	2		Smart / List
	3		Mute / Dimmer
	4		Info / Angle
	5		Back / Return
	6		Z/Back
	7		CH+ / Page+
	8		Up
	9		Vol-
	0		Left
	AV/CL		OK
	Zoom		Right
	[...]/Subtitle		Vol+
	Audio/Language		Down
	◀/Camera		CH- / Page-
	?		TVG/Top Menu
			TVG/Top Menu
			TXT/Menu
			D.Menu / Top
			Text / Goto
			D.Menu / Top
			Text / Goto





	Original	Replacement	Original	Replacement
	 TXT/Menu	 Menu / Home		
	 Red	 Red / Netflix / Search		
	 Green	 Green / APP / Repeat		
	 Yellow	 Yellow / YouTube / Repeat		
	 Blue	 Blue / Prime Video / Random		
	 [ <> ]	 Shift + Zoom /		
	 Rec/ >	 Rec / Rec Mode		
	 Play	 Play / Slow		
	 Pause	 Pause / Step / Freeze		
	 Stop	 Stop / Hold		
	  <	  << / Preset-		
	 >	 >>  / Preset+		
	 <<	 << / Tune-		
	 >>	 >> / Tune+		

