


























 












































Original		Replacement		Original		Replacement	
	Power		Power		Blue / C/S		Shift + Blue / Prime
	Timer		Sleep / Timer		Timer		Shift + Menu /
	Prog+		Shift + Up		Timer Clear		Shift + Exit / Cancel / Clear
	Day+		Shift + Right		Timer On/Off		Shift + Info / Angle
	Start+		Shift + Vol+		SP/LP		Smart / List
	Stop+		Shift + CH+ /		SV/V+		Display / Media
	Text Index		Text / Goto		Return		Back / Return
	Text Reveal		Subtitle / EQ		PAL / SEC		Picture / Format
	Text Size		Zoom / Size		INS / DUB		Sound / Title
	[Stop]		Shift + Stop /		Tip		Menu / Home
	Prog-		Shift + Down		Code		Exit / Cancel / Clear
	Day-		Shift + Left		Counter		I<< / Preset-
	Start-		Shift + Vol-		Reset		>>I / Preset+
	Stop-		Shift + CH- /		Audio		Audio / Lang I/II
	Red / VPS		Shift + Red / Netflix /		SAT		Shift + 0
	Green / ED/EW		Shift + Green / APP /		1		1
	Yellow		Shift + Yellow / YouTube / Repeat		2		2





 



 











 










 


























 













	Original	Replacement		Original	Replacement
	3	3			Left / Vol-
	4	4			Down / CH-
	5	5			Down / CH-
	6	6			Rec
	7	7			Stop
	8	8			Pause
	9	9			Play
	VPT	Guide / EPG / -/--			Open / Close
	0	0			<< / Tune-
	AV	AV / Input / RDS			>> / Tune+
	i	Info / Angle			Index
	Up / CH+	Up			Index Mark
	Up / CH+	CH+ / Page+			Index Erase
	Right / Vol+	Right			Traking
	Right / Vol+	Vol+			
	OK	OK			
	Left / Vol-	Vol-			

	Original	Replacement		Original	Replacement
	Left / Vol-	Left			Left
	Down / CH-	Down			Down
	Down / CH-	CH- / Page-			CH- / Page-
	Rec	Rec / Rec Mode			Rec / Rec Mode
	Stop	Stop / Hold			Stop / Hold
	Pause	Pause / Step / Freeze			Pause / Step / Freeze
	Play	Play / Slow			Play / Slow
	Open / Close	Eject / Surround			Eject / Surround
	<< / Tune-	<< / Tune-			<< / Tune-
	>> / Tune+	>> / Tune+			>> / Tune+
	Index	Red / Netflix / Search			Red / Netflix / Search
	Index Mark	Green / APP / Repeat			Green / APP / Repeat
	Index Erase	Yellow / YouTube / Repeat			Yellow / YouTube / Repeat
	Traking	Blue / Prime Video / Random			Blue / Prime Video / Random







Original		Replacement		Original		Replacement	
	Power		Power		Blue / C/S		Shift + Blue / Prime
	Timer		Sleep / Timer		Timer		Shift + Menu /
	Prog+		Shift + Up		Timer Clear		Shift + Exit / Cancel / Clear
	Day+		Shift + Right		Timer On/Off		Shift + Info / Angle
	Start+		Shift + Vol+		SP/LP		Smart / List
	Stop+		Shift + CH+ /		SV/V+		Display / Media
	Text Index		Text / Goto		Return		Back / Return
	Text Reveal		Subtitle / EQ		PAL / SEC		Picture / Format
	Text Size		Zoom / Size		INS / DUB		Sound / Title
	[Stop]		Shift + Stop /		Tip		Menu / Home
	Prog-		Shift + Down		Code		Exit / Cancel / Clear
	Day-		Shift + Left		Counter		I<< / Preset-
	Start-		Shift + Vol-		Reset		>>I / Preset+
	Stop-		Shift + CH- /		Audio		Audio / Lang I/II
	Red / VPS		Shift + Red / Netflix /		SAT		Shift + 0
	Green / ED/EW		Shift + Green / APP /		1		1
	Yellow		Shift + Yellow / YouTube / Repeat		2		2





	Original	Replacement		Original	Replacement
	3	 3			Left / Vol-
	4	 4			Down / CH-
	5	 5			Down / CH-
	6	 6			Rec
	7	 7			Stop
	8	 8			Pause
	9	 9			Play
	VPT	 Guide / EPG / -/--			Open / Close
	0	 0			<< / Tune-
	AV	 AV / Input / RDS			>> / Tune+
	i	 Info / Angle			Index
	Up / CH+	 Up			Index Mark
	Up / CH+	 CH+ / Page+			Index Erase
	Right / Vol+	 Right			Tracking
	Right / Vol+	 Vol+			
	OK	 OK			
	Left / Vol-	 Left			







Original	Replacement
Power	Power
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
AV	AV / Input / RDS
Up / CH+	Up
Up / CH+	CH+ / Page+
Right / Vol+	Right
Right / Vol+	Vol+
Left / Vol-	Left

Original	Replacement
Left / Vol-	Vol-
Down / CH-	Down
Down / CH-	CH- / Page-

