



Original	Replacement
 Power	 Power
 Source	 AV
 HDMI 1	 List
 Tv/DTV ◆	 TV/R
 AV	 Shift + AV
 HDMI ◆	 D. Menu
 Scart ◆	 3D
 YPBPR	 Options
 PC	 Back
 Media ◆	 Media
 Sleep	 Sleep
 Picture	 Shift + Format
 Sound	 Dual
 Menu	 Menu
 Exit	 Exit
 Size	 Format
 Info	 Info

Original	Replacement
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 OK	 Ok
 P+	 Ch +
 P-	 Ch -
 EPG	 Guide
 FAV ◆	 Pre Ch
 Txt	 Text
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Tv/Radio	 Shift + TV/R
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Original	Replacement	Original	Replacement
	Blue		Blue
	Play		Play
	<<		<<
	>>		>>
	Stop		Stop
	Rec		Rec
	I<		I<<
	>I		>>I
	Audio	+	Shift + Dual
	Stop Rec	+	Shift + Stop
	Freeze		Pause
	Subtitle		Subt
	Repeat Lang/ [≐?]	+	Shift + Text
	Zoom I-II/ [≐◇]		Eject
	1		1
	2		2
	3		3

Original	Replacement	Original	Replacement
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	Rec List	+	Shift + Rec
	@		Smart

