



| Original | Replacement      |
|----------|------------------|
| On       | Power            |
| Off      | Shift + Power    |
| Mute     | Mute / Dimmer    |
| AVR      | AV / Input / RDS |
| DVD      | Shift + 2        |
| CD       | Shift + 3        |
| Tape     | Shift + 5        |
| VID1/VCR | Shift + 4        |
| VID2/TV  | Shift + 1        |
| CBL/SAT  | Shift + 0        |
| AM/FM    | Shift + 6        |
| Sleep    | Sleep / Timer    |
| Test     | TV/Radio /       |
| Vol+     | Vol+             |
| Surr.    | Eject / Surround |
| Night    | Zoom / Size      |
| [=]      | Text / Goto      |

| Original     | Replacement      |
|--------------|------------------|
| Vol-         | Vol-             |
| CH./[=?      | Picture / Format |
| SPKR/Menu    | Menu / Home      |
| Up           | Up               |
| Left         | Left             |
| Set          | OK               |
| Right        | Right            |
| Digital/[=X] | Setup / OPT /    |
| Down         | Down             |
| Delay/Normal | Sound / Title    |
| 1            | 1                |
| 2            | 2                |
| 3            | 3                |
| 4            | 4                |
| 5            | 5                |
| 6            | 6                |
| 7            | 7                |





| Original     | Replacement                 |
|--------------|-----------------------------|
| 8            | 8                           |
| Tun-M/[≡+]   | Smart / List                |
| 9            | 9                           |
| 0            | 0                           |
| Mem/[≡◆]     | D.Menu / Top                |
| Tuning ▲     | >> / Tune+                  |
| Red          | Red / Netflix / Search      |
| Direct/Green | Green / APP / Repeat        |
| Clear/Yellow | Yellow / YouTube / Repeat   |
| Preset ▲     | >>  / Preset+               |
| Blue         | Blue / Prime Video / Random |
| Tuning ▼     | << / Tune-                  |
| RDS/D.Skip   | Display / Media             |
| Preset ▼     | << / Preset-                |
| << DVD       | Shift + << /                |
| > DVD        | Shift + Play /              |
| >> DVD       | Shift + >> /                |

Tune+

| Original      | Replacement            |
|---------------|------------------------|
| Stop DVD      | Shift + Stop /         |
| Pause DVD     | Shift + Pause / Step / |
| I<</Skip Down | Shift + I<< / Preset-  |
| Skip Up/>>I   | Shift + >>I / Preset+  |









| Original |              | Replacement |                  | Original |            | Replacement |                       |
|----------|--------------|-------------|------------------|----------|------------|-------------|-----------------------|
|          | Power On     |             | Power            |          | 3          |             | 3                     |
|          | Power Off    |             | Shift + Power    |          | 4          |             | 4                     |
|          | Vol+         |             | Vol+             |          | 5          |             | 5                     |
|          | Night        |             | Zoom / Size      |          | 6          |             | 6                     |
|          | [=]          |             | Text / Goto      |          | 7          |             | 7                     |
|          | Vol-         |             | Vol-             |          | 8          |             | 8                     |
|          | CH./[=?]     |             | Picture / Format |          | Tun-M/[=+] |             | Smart / List          |
|          | SPKR/Menu    |             | Menu / Home      |          | 9          |             | 9                     |
|          | Up           |             | Up               |          | 0          |             | 0                     |
|          | Left         |             | Left             |          | Mem/[=◇]   |             | D.Menu / Top          |
|          | Set          |             | OK               |          | Direct     |             | Green / APP / Repeat  |
|          | Right        |             | Right            |          | Clear      |             | Exit / Cancel / Clear |
|          | Digital/[=X] |             | Setup / OPT /    |          | Preset ▲   |             | CH+ / Page+           |
|          | Down         |             | Down             |          | Preset ▲   |             | Shift + >>1 / Preset+ |
|          | Delay/Normal |             | Sound / Title    |          | RDS/D.Skip |             | Display / Media       |
|          | 1            |             | 1                |          | Preset ▼   |             | CH- / Page-           |
|          | 2            |             | 2                |          | Preset ▼   |             | Shift + I<< / Preset- |









| Original  |                | Replacement   |                  | Original  |            | Replacement   |                               |
|---|----------------|---|------------------|---|------------|---|-------------------------------|
|    | Power On       |    | Power            |    | 4 VCR      |    | Shift + 4                     |
|    | Power (On/Off) |    | Mute / Dimmer    |    | 5          |    | 5                             |
|    | Power Off      |    | Shift + Power    |    | 5 VCR      |    | Shift + 5                     |
|    | PR+ VCR        |    | CH+ / Page+      |    | 6          |    | 6                             |
|    | Input VCR      |    | AV / Input / RDS |    | 6 VCR      |    | Shift + 6                     |
|    | Vol+ VCR       |    | Vol+             |    | 7          |    | 7                             |
|    | PR- VCR        |    | CH- / Page-      |    | 7 VCR      |    | Shift + 7                     |
|    | Vol- VCR       |    | Vol-             |    | 8          |    | 8                             |
|    | SPKR/Menu      |    | Menu / Home      |    | 8 VCR      |    | Shift + 8                     |
|    | Delay/Normal   |    | Sound / Title    |    | Tun-M/[≡+] |    | Smart / List                  |
|  | 1              |  | 1                |  | 9          |  | 9                             |
|  | 1 VCR          |  | Shift + 1        |  | 9 VCR      |  | Shift + 9                     |
|  | 2              |  | 2                |  | 0          |  | 0                             |
|  | 2 VCR          |  | Shift + 2        |  | 0 VCR      |  | Shift + 0                     |
|  | 3              |  | 3                |  | Mem/[≡♦]   |  | D.Menu / Top                  |
|  | 3 VCR          |  | Shift + 3        |  | Direct     |  | Green / APP / Repeat          |
|  | 4              |  | 4                |  | Clear VCR  |  | Shift + Exit / Cancel / Clear |







