



Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Anyview Cast	 Shift + Up
 Anyview Cast Off	 Shift + Down
 TV	 TV/Radio /
 Source	 AV / Input / RDS
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I	 >>I / Preset+
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 DMP	 Display / Media
 Pause	 Pause / Step / Freeze
 FAV	 Fav / Marker / PC
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat

Original	Replacement
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Menu	 Menu / Home
 HiSmart	 Smart / List
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Return	 Shift + Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 CH.List	 Shift + Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 EPG	 Guide / EPG / -/-
 CH-	 CH- / Page-





Original		Replacement	
1	1	TV	1
2	2	DVD	2
3	3	CD - STB	3
4	4	VIDEO	4
5	5	TAPE	5
6	6	TUNER	6
7	7	AUX - HDD	7
8	8	USB	8
9	9	BLUETOOTH	9
INFO	Info	ANGLE	Info / Angle
0	0	HDMI - BAT	0
PRE CH	PRE-CH	RETURN	Back / Return
I/II LANG.	Lang/I-II	LANG I/II	Audio / Lang I/II
P.MODE	P.Mode	FORMAT PICTURE	Picture / Format
S.MODE	S.Mode	TITLE SOUND	Sound / Title
SIZE	Size	SIZE ZOOM	Zoom / Size
SUBT.	Subt.	EQ SUBTITLE	Subtitle / EQ

Original		Replacement	
TEXT	Text	GOTO TEXT	Text / Goto
INDEX	Index	TOP MENU D.MENU	D.Menu / Top
SUB PAGE	Subpage	OPT-TOOLS SETUP	Setup / OPT /

