



Original		Replacement		Original		Replacement	
	Power		Power		0		0
	Mute		Mute		-/--		Guide
	Up		Up		Exit		Exit
	Down		Down		P<P/Swap		Pre Ch
	Right		Right		Vol+		Vol +
	Left		Left		Vol-		Vol -
	OK/Select		Ok		P+		Ch +
	M		Menu		P-		Ch -
	1		1		PP		Eject
	2		2		I-II		Dual
	3		3		Tv/DTV		TV/R
	4		4		[≡]		Text
	5		5		[≡0]		Options
	6		6		AV/Source		AV
	7		7		[≡+]/[X]		Format
	8		8		[≡X]/[■ ■]		3D
	9		9		[.≡]/[■]		Subt





Original		Replacement		Original		Replacement	
	[≡◆]		Media				
	[≡?]		Back				
	[≡i]		Info				
	Red/[+]/Wide/↑		Red				
	Green/↓		Green				
	Yellow		Yellow				
	Blue/Guide		Blue				
	[i]		D. Menu				

