

 







Original	Replacement
 Standby	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Vol+	 Vol+
 Vol-	 Vol-
 Left	 Left
 Right	 Right
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+

Original	Replacement
 Stop	 Stop / Hold
 Play/Pause	 Play / Slow
 Play/Pause	 Pause / Step / Freeze
 I>/Resume	 Shift + Play /
 Surround	 Eject / Surround
 Sound	 Sound / Title
 Night	 Shift + Sleep / Timer
 Mute	 Mute / Dimmer
 Repeat	 Green / APP / Repeat
 Repeat A-B	 Yellow / YouTube / Repeat
 Sleep	 Sleep / Timer
 DIM	 Shift + Mute / Dimmer
 Subw +	 Up
 Rear +	 Shift + CH+ /
 Center +	 CH+ / Page+
 Tv Vol+	 Shift + Vol+
 Subw -	 Down






 


 



 
 
 

 









 









 







Original	Replacement
REAR	SHIFT + CH PAGE Shift + CH- /
CENTER	CH PAGE CH- / Page-
TV VOL	SHIFT + VOL Shift + Vol-

Original	Replacement





 



 

 

 









 

 



 







Original	Replacement	Original	Replacement
 Standby	 Power	 Stop	 Stop / Hold
 1	 1	 Play/Pause	 Play / Slow
 2	 2	 I>/Resume	 Shift + Play /
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 Disc (DVD)	 D.Menu / Top		
 0	 0		
 Vol+	 Vol+		
 System (DVD)	 Menu / Home		
 Vol-	 Vol-		
 I<<	 I<< / Preset-		
 >>I	 >>I / Preset+		





 



 

 

 













Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Up		Up				
	Left		Left				
	OK		OK				
	Right		Right				
	Down		Down				





Original		Replacement		Original		Replacement	
	Standby		Power				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				

