



Original	Replacement	Original	Replacement
 Power	 Power	 EPG	 Guide
 Text	 Text	 Info	 Info
 Red	 Red	 Vol+	 Vol +
 Green	 Green	 Vol-	 Vol -
 Yellow	 Yellow	 Play	 Play
 Blue	 Blue	 Pause	 Pause
 Tv/S	 TV/R	 Mute	 Mute
 Menu	 Menu	 CH+	 Ch +
 APP	 Media	 CH-	 Ch -
 Disp	 Shift + Info	 1	 1
 Back	 Back	 2	 2
 Exit	 Exit	 3	 3
 Up	 Up	 4	 4
 Left	 Left	 5	 5
 OK	 Ok	 6	 6
 Right	 Right	 7	 7
 Down	 Down	 8	 8





Original	Replacement	Original	Replacement
 9	 9		
 0	 0		
 List	 List		
 Opt.	 Options		

