

 
 
 

 

 

 

 

 

 

 
 
 

 
 
 

 



 
 
 

 

 



 
 
 
 
 
 



 
 
 
 
 



 




 


 
 








 
 
 

 



 


Original	Replacement	Original	Replacement
 Power	 Power	 Sleep	 Sleep
 Tv/AV	 AV	 Edit	 Smart
 1	 1	 Info	 Info
 2	 2	 Mute	 Mute
 3	 3	 Menu	 Menu
 4	 4	 Still	 Media
 5	 5	 EPG	 Guide
 6	 6	 Red	 Red
 7	 7	 Green	 Green
 8	 8	 Yellow	 Yellow
 9	 9	 Blue	 Blue
 0	 0	 Up	 Up
 -/--	 Shift + Guide	 Down	 Down
 Recall	 Pre Ch	 Right	 Right
 P.Mode	 Shift + Format	 Left	 Left
 S.Mode	 Shift + Dual	 Enter	 Ok
 Nicam	 Options	 CH+	 Ch +

Original	Replacement	Original	Replacement
 Sleep	 Sleep	 Edit	 Smart
 Info	 Info	 Mute	 Mute
 Menu	 Menu	 Still	 Media
 EPG	 Guide	 Red	 Red
 Green	 Green	 Yellow	 Yellow
 Blue	 Blue	 Up	 Up
 Down	 Down	 Right	 Right
 Right	 Right	 Left	 Left
 Enter	 Ok	 CH+	 Ch +





	Original	Replacement		Original	Replacement
	CH-	 Ch -			
	Vol+	 Vol +			
	Vol-	 Vol -			
	3D N.R	 3D			
	FAV	 +  Shift + Pre Ch			
	Text	 Text			
	Cancel	 Exit			
	Index	 List			
	Subpage	 Eject			
	Hold	 Back			
	Size	 Format			
	FAV+	 +  Shift + Ch +			
	FAV-	 +  Shift + Ch -			
	Tv/Radio	 TV/R			
	Audio	 D. Menu			
	Lang	 Dual			
	Subtitle	 Subt			

