

 











 





Original	Replacement
 Power	 Power
 Source	 AV
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Recall	 Pre Ch
 TV	 TV/R
 Menu	 Menu
 Q.Menu	 D. Menu
 World	 Shift + Guide

Original	Replacement
 OK	 Ok
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 PR+	 Ch +
 PR-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 Exit	 Exit
 Back	 Back
 Mute	 Mute
 i	 Info
 Guide	 Guide
 [≡]/Text	 Text
 Folder	 Format
 [-O-]	 Subt





Original	Replacement	Original	Replacement
 */O	 Sleep		
 */Q	 Eject		
 Netflix	 Media		
 Camera-Music-Ph	 Options		
 YouTube	 3D		
 [≡]..	 List		
 Lang	 Dual		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Play	 Play		
 Rec	 Rec		
 Pause	 Pause		
 >>	 >>		
 <<	 <<		
 Stop	 Stop		

