


 
 
 


 
 



 

 
 
 
 



 

 






 

 



 

 





 

 


 

 
 


 


 



 

 








 











Original	Replacement	Original	Replacement
 Standby	 Power	 6	 6
 [ * ]	 Shift + 3D	 7	 7
 AV	 AV	 8	 8
 Mute	 Shift + Dual	 9	 9
 Tv/DTV	 Mute	 0	 0
 Pic Mode	 Smart	 Replay	 Shift + Pre Ch
 O I/II	 Shift + Format	 Skip	 Media
 [ ... ]	 Dual	 Slow	 Pause
 Tv/Radio	 Subt	 Stop	 Stop
 Sleep	 TV/R	 Rec	 Rec
 Zoom	 Sleep	 <<	 <<
 1	 Eject	 Play/Pause	 Play
 2	 1	 >>	 >>
 3	 2	 Red	 Red
 4	 3	 Green	 Green
 5	 4	 Yellow	 Yellow
	 5	 Blue	 Blue





Original	Replacement	Original	Replacement
 Menu	 Menu	 Bookmark/Jump	 Shift + Subt
 Back	 Back	 A-B	 Shift + Play
 i	 Info	 Mix	 Options
 Guide	 Guide	 [≡i]	 Shift + Info
 [≡]/Text On/Off	 Text	 [X]	 3D
 Playlist	 Pre Ch	 [?]	 Shift + Text
 Schedule	 Exit	 F.T/L	 D. Menu
 Up	 Up	 [◆]	 List
 Down	 Down	 [+]	 Format
 Right	 Right	 Timer	 Shift + AV
 Left	 Left		
 OK/List	 Ok		
 P+	 Ch +		
 P-	 Ch -		
 Vol+	 Vol +		
 Vol-	 Vol -		
 Bookmark/ADD	 Shift + Options		

