 

 
 






 
 


 
 

 





 

 


 
 
 
 




 











 


 
 
 


 








 



 
 




Original	Replacement
 Power Tv	 Power
 Tv/Video	 TV/R
 CH+	 Ch +
 CH-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10/Tv Return	 Guide
 +10/100+	 Pre Ch
 Vol+	 Vol +

Original	Replacement
 Vol-	 Vol -
 Muting	 Mute










Original	Replacement	Original	Replacement
 Power Audio	 Power	 Down	 Down
 1	 1	 Right/Preset Up	 Right
 2	 2	 Left/Preset Down	 Left
 3	 3	 Muting	 Mute
 4	 4	 Menu/PL	 Menu
 5	 5	 Top Menu/PG	 +  Shift + Menu
 6	 6	 On Screen	 3D
 7	 7	 Back / Rec	 Rec
 8	 8	 Stop / Memory	 Stop
 9	 9	 Play	 Play
 0	 0	 Pause/FM Mode	 Pause
 10 / Tv Return	 Guide	 I<</Tuning-	 I<<
 +10 / 100+	 Pre Ch	 >>I/Tuning+	 >>I
 CH+	 Ch +	 <</Slow-	 <<
 CH-	 Ch -	 >>/Slow+	 >>
 Up	 Up	 Audio	 Dual
 Enter	 Ok	 Angle	 +  Shift + 3D





 








 


Original	Replacement
 Zoom	 Eject
 Subtitle	 Subt
 Vol+	 Vol +
 Vol-	 Vol -
 Repeat	 Text
 Page	 List
 Surround	 Smart
 PTY Search	 AV
 TA/News/Info	 Info
 PTY Select-	 Shift + Left
 PTY Select+	 Shift + Right
 Level+	 Shift + Up
 Level-	 Shift + Down
 Sleep	 Sleep
 Return	 Back
 Display	 Shift + Info
 Play Mode	 Format

Original	Replacement
 STB Control	 Shift + Smart
 Dimmer	 Shift + Media
 USB Memory	 Media
 Cancel	 Exit
 DVD	 Blue
 iPod	 Red
 FM/AM	 Green
 VCR/Video Control	 Yellow
 Tv/Video	 TV/R
 Set Up	 D. Menu
 SPK Level	 Shift + AV
 Setting	 Options
 Treble/Bass	 Shift + Sleep
 Title/Group	 Shift + List
 VFP/Scan Mode	 Shift + Options
 Tv Sound	 Shift + Dual





	Original	Replacement	Original	Replacement
	Power VCR/STB			Power
1	1	1		1
2	2	2		2
3	3	3		3
4	4	4		4
5	5	5		5
6	6	6		6
7	7	7		7
8	8	8		8
9	9	9		9
0	0	0		0
	Tv/Video			TV/R
	CH+			Ch +
	CH-			Ch -
	Vol+			Vol +
	Vol-			Vol -
	Muting			Mute

