

 







 

 















Original		Replacement		Original	Replacement
	Start/Stop		Power		
	Snap Shot		Display / Media		
	T		Up		
	<<		<< / Tune-		
	<<		Left		
	Play		Play / Slow		
	Pause		Pause / Step / Freeze		
	>>		>> / Tune+		
	>>		Right		
	W		Down		
	Info		Info / Angle		
	Index		Smart / List		

