













 




Original	Replacement	Original	Replacement
 Power	 Power	 Source	 AV / Input / RDS
 1	 1	 P+	 CH+ / Page+
 2	 2	 Home	 Menu / Home
 3	 3	 G	 Guide / EPG / -/-
 4	 4	 i	 Info / Angle
 5	 5	 Up	 Up
 6	 6	 Left	 Left
 7	 7	 OK	 OK
 8	 8	 Right	 Right
 9	 9	 Down	 Down
 Lang	 Audio / Lang I/II	 Back	 Back / Return
 0	 0	 Exit	 Exit / Cancel / Clear
 TXT	 Text / Goto	 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+	 YouTube	 Shift + Yellow / YouTube /
 Mute	 Mute / Dimmer	 *1	 Picture / Format
 P-	 CH- / Page-	 Prime Video	 Shift + Blue / Prime
 Vol-	 Vol-	 Red	 Red / Netflix / Search

Original	Replacement	Original	Replacement
 Power	 Power	 TV	 DVD
 1	 1	 SAT	 AUX
 2	 2	 SLOW	 STEP-FREEZE
 3	 3	 HOLD	 REC MODE
 4	 4	 TUNE-	 TUNE+
 5	 5	 PRESET-	 PRESET+
 6	 6	 TITLE	 LANG I/II
 7	 7	 EQ	 SURROUND
 8	 8	 SOUND	 AUDIO
 9	 9	 SUBTITLE	 PROGRAM
 LANG.	 AUDIO	 FORMAT	 ZOOM
 0	 0	 PICTURE	 SLEEP
 TXT	 TEXT	 TOP MENU	 OPT-TOOLS
 Vol+	 Vol+	 GOTO	 RDS
 Mute	 Mute / Dimmer	 D.MENU	 SETUP
 P-	 CH- / Page-	 TEXT	 TV INPUT
 Vol-	 Vol-	 HOME	 ANGLE
		 MENU	 INFO
		 OK	 OK
		 EXIT	 EXIT
		 CANCEL	 CANCEL
		 LIST	 LIST
		 SMART	 SMART
		 MEDIA	 MEDIA
		 DISPLAY	 DISPLAY
		 TV	 DVD
		 1	 2
		 2	 3
		 3	 4
		 4	 5
		 5	 6
		 6	 7
		 7	 8
		 8	 9
		 9	 0
		 0	 FAV MARKER
		 GUIDE EPG	 HDMI - BAT
		 NETFLIX	 APP
		 APP	 YouTube
		 YouTube	 Prime Video
		 Prime Video	 RANDOM
		 RANDOM	 RANDOM



