
 
 
 










Original	Replacement
	Power
	Mute
	P.Mode
	S.Mode
	FAV
	Sleep
	1
	2
	3
	4
	5
	6
	7
	8
	9
	-/--
	0

Original	Replacement
	Back
	Vol+
	CH List
	CH+
	Vol-
	Aspect
	CH-
	EPG
	Audio
	Rec
	Menu
	Up
	Exit
	Left
	Enter
	Right
	Source

Original	Replacement
	Power
	Mute / Dimmer
	Picture / Format
	Sound / Title
	Fav / Marker / PC
	Sleep / Timer
	1
	2
	3
	4
	5
	6
	7
	8
	9
	Shift + Guide / EPG / -/--
	0

Original	Replacement
	Back / Return
	Vol+
	Smart / List
	CH+ / Page+
	Vol-
	Shift + Picture / Format
	CH- / Page-
	Guide / EPG / -/--
	Audio / Lang I/II
	Rec / Rec Mode
	Menu / Home
	Up
	Exit / Cancel / Clear
	Left
	OK
	Right
	AV / Input / RDS



