



Original	Replacement
	Power
	Display / Media
	Play / Slow
	Pause / Step / Freeze
	6
	Fav / Marker / PC
	Audio / Lang I/II
	Menu / Home
	Exit / Cancel / Clear
	Up
	Down
	I<< / Preset-
	>>I / Preset+
	OK
	Stop / Hold
	<< / Tune-
	>> / Tune+

Original	Replacement
	TV/Radio / Program
	Blue / Prime Video / Random
	Text / Goto
	Shift + Sleep / Timer
	Zoom / Size
	Sleep / Timer
	Mute / Dimmer
	Vol+
	Vol-
	Shift + TV/Radio / Program
	D.Menu / Top
	Sound / Title
	Eject / Surround
	Picture / Format
	Shift + Mute / Dimmer

