



Original	Replacement
	 Power
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Text / Goto
	 0
	 Info / Angle
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-

Original	Replacement
	 AV / Input / RDS
	 CH- / Page-
	 Smart / List
	 Guide / EPG / -/--
	 Menu / Home
	 Up
	 Left
	 OK
	 Right
	 Down
	 Back / Return
	 Exit / Cancel / Clear
	 Shift + Red / Netflix /
	 Shift + Yellow / YouTube /
	 Shift + Blue / Prime
	 TV/Radio /
	 Display / Media





Original	Replacement
	FPay
	Red
	Green
	Yellow
	Blue
	<<
	Stop
	>>
	Rec
	Play
	Pause

Original	Replacement

