



 



















 
 

 


 







Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol+
 TV/RAD	 TV/Radio /	 Mute	 Mute / Dimmer
 Input	 AV / Input / RDS	 PR+/Page Up	 CH+ / Page+
 AV Mode	 Picture / Format	 Vol-	 Vol-
 Energy Saving	 Eject / Surround	 PR-/Page Down	 CH- / Page-
 1	 1	 Up	 Up
 2	 2	 Left	 Left
 3	 3	 OK	 OK
 4	 4	 Right	 Right
 5	 5	 Menu	 Menu / Home
 6	 6	 Down	 Down
 7	 7	 Return	 Back / Return
 8	 8	 Red	 Red / Netflix / Search
 9	 9	 Green/Stop	 Green / APP / Repeat
 List	 Smart / List	 Green/Stop	 Stop / Hold
 0	 0	 Yellow/Play	 Yellow / YouTube / Repeat
 Q.View	 Display / Media	 Yellow/Play	 Play / Slow

Original	Replacement	Original	Replacement
 DIMMER MUTE	 SHIFT	 TV	 DVD
 SLOW	 SAT	 AUX	 REC MODE
 STEP-FREEZE	 HOLD	 TUNE-	 PRESET-
 TUNE+	 PRESET+	 TUNE+	 PRESET+
 TITLE	 EQ	 TITLE	 SURROUND
 LANG UI	 SURROUND	 SOUND	 AUDIO
 EQ	 PROGRAM	 FORMAT	 SIZE
 TIMER	 TV RADIO	 PICTURE	 ZOOM
 PROGRAM	 RDS	 TOP MENU	 OPT-TOOLS
 TV RADIO	 AV INPUT	 D.MENU	 SETUP
 RDS	 HOME	 GOTO	 TEXT
 AV INPUT	 ANGLE	 MENU	 INFO
 HOME	 OK	 RETURN	 BACK
 MENU	 EXIT	 CANCEL	 LIST
 LIST	 SMART	 VOL+	 MEDIA
 SMART	 DISPLAY	 VOL-	 CH PAGE
 MEDIA	 TV	 TV	 DVD
DVD	 DVD	 1	 CD-STB
CD-STB	 TUNER	 2	 VIDEO
VIDEO	 TAPE	 3	 AUX-HDD
AUX-HDD	 BLUETOOTH	 4	 USB
USB	 BACK	 5	 TUNER
BLUETOOTH	 NETFLIX	 6	 AUX-HDD
BACK	 REPEAT	 7	 USB
NETFLIX	 SEARCH	 8	 BLUETOOTH
APP	 REPEAT	 9	 HDMI-BAT
HOLD	 REPEAT A-B	 0	 FC
STOP	 HOLD	 GUIDE	 FAV MARKER
STOP	 STOP	 EPG	 SEARCH
YELLOW	 YELLOW	 REPEAT	 REPEAT A-B
YELLOW	 REPEAT	 REPEAT A-B	 RANDOM
YELLOW	 REPEAT	 REPEAT A-B	 RANDOM
YELLOW	 REPEAT	 REPEAT A-B	 RANDOM
YELLOW	 REPEAT	 REPEAT A-B	 RANDOM
YELLOW	 REPEAT	 REPEAT A-B	 RANDOM
Q.VIEW	 REPEAT	 REPEAT A-B	 RANDOM





Original	Replacement
 Blue/Pause	 Blue / Prime Video / Random
 Blue/Pause	 Pause / Step / Freeze
 Text/[≡]	 Text / Goto
 T.OPT/<<	 I<< / Preset-
 T.OPT/<<	 Setup / OPT /
 T.OPT/<<	 << / Tune-
 Subtitle/>>	 >>I / Preset+
 Subtitle/>>	 Subtitle / EQ
 Subtitle/>>	 >> / Tune+
 Simplink	 Sleep / Timer
 Q.Menu	 D.Menu / Top
 Info	 Info / Angle
 Guide	 Guide / EPG / -/--
 FAV/Mark	 Fav / Marker / PC

Original	Replacement

