

 



 





 



 





 






 












Original	Replacement
 Power	 Power
 Open/Close	 Eject / Surround
 Function	 Smart / List
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Clear	 Exit / Cancel / Clear
 0	 0
 Repeat	 Shift + Green / APP /
 I<<<	 I<<< / Preset-
 <<<	 <<< / Tune-

Original	Replacement
 >>>	 >>> / Tune+
 >>I	 >>I / Preset+
 Stop	 Stop / Hold
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Speaker Level	 TV/Radio /
 Vol+	 Vol+
 Optical Tv Sound	 Setup / OPT /
 Sound Effect	 Sound / Title
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Home	 Menu / Home
 3D Sound	 Shift + Sound / Title
 Info/Menu	 Info / Angle
 Left/Tuning-	 Left
 Up/Presets+	 Up
 Right/Tuning+	 Right





Original	Replacement
Enter	OK
Down/Preset-	Down
Back	Back / Return
Title/Pop Up	Picture / Format
Disc Menu	D.Menu / Top
Red/RDS	Red / Netflix / Search
Green/PTY	Green / APP / Repeat
Yellow/PTY Search	Yellow / YouTube / Repeat
Blue/Mono/Stereo	Blue / Prime Video / Random
Subtitle	Subtitle / EQ
Audio	Audio / Lang I/II
Sleep	Sleep / Timer
*	Display / Media
Power Tv	Shift + Power
Volum+ Tv	Shift + Vol+
PR/CH+ Tv	CH+ / Page+
AV Input Tv	AV / Input / RDS

Original	Replacement
Volum- Tv	Shift + Vol-
PR/CH- Tv	CH- / Page-

