




Original	Replacement
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 USB Rec	 Rec / Rec Mode
 I<</Tuning-	 I<< / Preset-
 >>I/Tuning+	 >>I / Preset+
 Special EQ	 Audio / Lang I/II
 Auto DJ	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Alarm	 Zoom / Size
 Sleep	 Sleep / Timer
 PTY	 TV/Radio /
 Jukebox/Memor	 Setup / OPT /
 RDS/Set	 Menu / Home
 (i)	 Info / Angle

Original	Replacement
 Delete	 Exit / Cancel / Clear
 Vol+	 Vol+
 F	 Smart / List
 Preset/Folder Up	 CH+ / Page+
 Vol-	 Vol-
 Preset/Folder	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Equalizer	 Guide / EPG / -/-
 0	 0





Original	Replacement
Repeat	Green / APP / Repeat
Clock	+  Shift + Sleep / Timer

Original	Replacement

