

















 

 


















Original	Replacement
 Power	 Power
 F	 Menu / Home
 ASC(III)	 Setup / OPT /
 Vol+	 Vol+
 Standard	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Cinema	 Smart / List
 I<<	 I<< / Preset-
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Rear Level+	 >>I / Preset+
 Woofer Level+	 CH+ / Page+
 Auto Power On	 Up
 Rear Level-	 Right
 Woofer Level-	 CH- / Page-
	 Down

Original	Replacement
 Auto Power Off	 Left

