












 











 

 



 
 


 



 

 

 
 
 



 
 



 

 

 
 








 
 

 
 




Original		Replacement		Original		Replacement	
	On		Power		OK		Ok
	Off		Shift + Power		Vol+		Vol +
	Rec		Rec		Vol-		Vol -
	Pause		Pause		Mute		Mute
	Stop		Stop		CH+		Ch +
	<<		<<		CH-		Ch -
	Play		Play		1		1
	>>		>>		2		2
	I<		I<<		3		3
	>I		>>I		4		4
	←		Pre Ch		5		5
	TV		TV/R		6		6
	(i)		Info		7		7
	Up		Up		8		8
	Down		Down		9		9
	Right		Right		0		0
	Left		Left		*		Smart





Original		Replacement		Original		Replacement	
	#		Media				
	Clear		Exit				
	[T]		Menu				
	[:≡]		Guide				
	Enter		Back				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

