



Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		9		9
	Power		Power		*EPG		Guide / EPG / -/-
	O/F.Set		Sleep / Timer		0/AV		0
	[]/F. List		Smart / List		0/AV		AV / Input / RDS
	Audio		Audio / Lang I/II	# PIP button"/>	#PIP		Setup / OPT /
	[+]/Picture		Picture / Format		Text		Text / Goto
	→[]←/Rec Menu		D.Menu / Top		Menu		Menu / Home
	Radio/Search		TV/Radio /		End		Exit / Cancel / Clear
	Radio/Search		Shift + Red / Netflix /		Info		Info / Angle
	1		1		P+		CH+ / Page+
	2		2		Up		Up
	3		3		Vol-		Vol-
	4		4		Left		Left
	5		5		OK		OK
	6		6		Down		Down
	7		7		Vol+		Vol+
	8		8		Right		Right





 

 

 

 

 









 

 

 


 



 



 



 

 

 

















 

 





Original		Replacement		Original		Replacement	
	P-		CH- / Page-				
	Red/C-Set		Red / Netflix / Search				
	Green/SV		Green / APP / Repeat				
	Yellow/Title		Sound / Title				
	Yellow/Title		Yellow / YouTube / Repeat				
	Blue/Card		Blue / Prime Video / Random				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				








Original	Replacement	Original	Replacement
	Mute		Mute / Dimmer
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	*EPG		Guide / EPG / -/--
	0/AV		AV / Input / RDS
	0/AV		0
#PIP button" data-bbox="228 848 261 878"/>	#PIP		Picture / Format
	Menu		Menu / Home
	Info		Info / Angle
	P+		CH+ / Page+
	Up		Up
	Vol-		Vol-
	Left		Left
	OK		OK
	Down		Down
	Vol+		Vol+
	Right		Right
	P-		CH- / Page-
	Red/C-Set		Red / Netflix / Search
	Green/SV		Green / APP / Repeat
	Yellow/Title		Yellow / YouTube / Repeat
	Yellow/Title		Sound / Title
	Blue/Card		Blue / Prime Video / Random
	<<		<< / Tune-
	Play		Play / Slow
	>>		>> / Tune+



 



 

 



 

 

 
 
 

 

 

 

 

 



 





 



 

 



 

 

 



 

 

 





 





Original	Replacement	Original	Replacement
	Rec / Rec Mode		
	Pause / Step / Freeze		
	Stop / Hold		




 












 





Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		8		8
	Power		Power		9		9
	O/F.Set		Sleep / Timer		DVD-AV		AV / Input / RDS
	[]/F. List		Smart / List		0/AV		0
	Audio/Repeat		Shift + Green / APP /		#PIP		Setup / OPT /
	Audio/Repeat		Audio / Lang I/II		Disc-M		D.Menu / Top
	[+]/Picture		Picture / Format		Menu		Menu / Home
	→[]←/Rec Menu		Text / Goto		End		Exit / Cancel / Clear
	Radio/Search		Shift + Red / Netfix /		Info		Info / Angle
	Radio/Search		TV/Radio /		P+		CH+ / Page+
	1		1		Up		Up
	2		2		Vol-		Vol-
	3		3		Left		Left
	4		4		OK		OK
	5		5		Down		Down
	6		6		Vol+		Vol+
	7		7		Right		Right







 

 

 

 

 



 

 

 

 

 





 





 



 



 

 

 

 



 

 

 





 





Original		Replacement		Original		Replacement	
	P-		CH- / Page-				
	Red/C-Set		Red / Netflix / Search				
	Green/SV		Green / APP / Repeat				
	Yellow/Title		Yellow / YouTube / Repeat				
	Yellow/Title		Sound / Title				
	Blue/Card		Blue / Prime Video / Random				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				





Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		8		8
	Power		Power		9		9
	O/F.Set		Sleep / Timer		*EPG		Guide / EPG / -/--
	[]/F.List		Smart / List		0/AV		0
	Audio/Repeat		Green / APP / Repeat		0/AV		AV / Input / RDS
	Audio/Repeat		Audio / Lang I/II		#PIP		Setup / OPT /
	[+]/Picture		Picture / Format		Menu		Menu / Home
	→[]←/Rec Menu		D.Menu / Top		End		Exit / Cancel / Clear
	Radio/Search		Red / Netflix / Search		Info		Info / Angle
	Radio/Search		TV/Radio /		P+		CH+ / Page+
	1		1		Up		Up
	2		2		Vol-		Vol-
	3		3		Left		Left
	4		4		OK		OK
	5		5		Down		Down
	6		6		Vol+		Vol+
	7		7		Right		Right





Original		Replacement		Original		Replacement	
	P-		CH- / Page-				
	<<		<< / Tune-				
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	Pause		Pause / Step / Freeze				
	Stop		Stop / Hold				

