


























 

 



 







































Original	Replacement	Original	Replacement
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	M	 Menu / Home
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	Down	 Down
Sleep	 Sleep / Timer	Vol+	 Vol+
1	 1	Vol-	 Vol-
2	 2	Left / -	 Left
3	 3	Right / +	 Right
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	G	 Shift + Yellow / YouTube / Repeat
















 

Original	Replacement	Original	Replacement
Power	 Power	CH / Guide	 Guide / EPG / -/--
Recall	 Back / Return	Up	 Up
CC	 Subtitle / EQ	M	 Menu / Home
Text	 Text / Goto	A / CH	 Info / Angle
Smart	 Smart / List	Down	 Down
Sleep	 Sleep / Timer	Vol+	 Vol+
1	 1	Vol-	 Vol-
2	 2	Left / -	 Left
3	 3	Right / +	 Right
4	 4	Mute	 Mute / Dimmer
5	 5	CH+	 CH+ / Page+
6	 6	CH-	 CH- / Page-
7	 7	A	 Red / Netflix / Search
8	 8	B	 Green / APP / Repeat
9	 9	C	 Yellow / YouTube / Repeat
0	 0	D	 Blue / Prime Video / Random
Reset	 Exit / Cancel / Clear	G	 Shift + Yellow / YouTube / Repeat
























Original	Replacement	Original	Replacement
Power	 Power		
Recall	 Back / Return		
CC	 Subtitle / EQ		
Text	 Text / Goto		
Smart	 Smart / List		
Sleep	 Sleep / Timer		
1	 1		
2	 2		
3	 3		
4	 4		
5	 5		
6	 6		
7	 7		
8	 8		
9	 9		
0	 0		
Reset	 Exit / Cancel / Clear		














 

 
 
Original	Replacement	Original	Replacement
Up	 Up		
CH / Guide	 Guide / EPG / -/--		
Down	 Down		
M	 Menu / Home		
Vol+	 Vol+		
A / CH	 Info / Angle		
Vol-	 Vol-		
Mute	 Mute / Dimmer		
Left / -	 Left		
Right / +	 Right		
CH+	 CH+ / Page+		
CH-	 CH- / Page-		
A	 Red / Netflix / Search		
B	 Green / APP / Repeat		
C	 Yellow / YouTube / Repeat		
D	 Blue / Prime Video / Random		
Clock	 Shift +  Sleep / Timer		







Original	Replacement	Replacement
Power		Power
Recall		Back / Return
CC		Subtitle / EQ
Text		Text / Goto
Smart		Smart / List
Sleep		Sleep / Timer
1		1
2		2
3		3
4		4
5		5
6		6
7		7
8		8
9		9
0		0
Reset		Exit / Cancel / Clear

Original	Replacement	Replacement
CH / Guide		Guide / EPG / -/--
Up		Up
Down		Down
A / CH		Info / Angle
M		Menu / Home
Right / +		Right
Left / -		Left
Vol+		Vol+
Vol-		Vol-
Mute		Mute / Dimmer
CH+		CH+ / Page+
CH-		CH- / Page-
A		Red / Netflix / Search
B		Green / APP / Repeat
C		Yellow / YouTube / Repeat
D		Blue / Prime Video / Random
E		Shift + Red / Netflix / Search



