


 









 











 
 

 

 


 


 

 



Original	Replacement	Original	Replacement
	Power		Power
	Display		Info
	N/P		Pre Ch
	Open / Close		Eject
	Language		Dual
	Angle		Format
	Subtitle		Subt
	Prog		Sleep
	Key b		Ch -
	Key #		Ch +
	Return		Back
	View		3D
	Mute		Mute
	PDVD		Smart
	Time		AV
	Zoom		Shift + Eject
	Menu		Menu
	Title		Media
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	Setup		Options
	PBC		Red
	A/B		TV/R
	Repeat		Text
	L/R		Green
	RAN		Yellow
	Volume+		Vol +
	Volume-		Vol -
	Step		Shift + Pause
	Resume		Shift + Stop
	1		1





	Original	Replacement		Replacement
	2		2	
	3		3	
	4		4	
	5		5	
	6		6	
	7		7	
	8		8	
	9		9	
	0/10		0	
	10+		Guide	
	Clear / EQ		Exit	
	REV		<<	
	FWD		>>	
	Prev		I<<	
	Next		>>I	
	Stop		Stop	
	Play		Play	

	Original	Replacement		Replacement
	Pause		Pause	
	Slow		Rec	

