



Original	Replacement	Original	Replacement
	Power		Source
	Mute		AV / Input / RDS
	1		Mute / Dimmer
	2		1
	3		Audio / Nicam
	4		Audio / Lang I/II
	5		Left
	6		OK
	7		Right
	8		Down
	9		Exit
	Recall		Menu
	0		Vol+
	Sleep		Mouse On/Off
			CH+
			Vol-
	CH.List		Home
			Shift + Menu /
			CH- / Page-
			P.Mode
			S.Mode
			AV / Input / RDS
			Audio / Lang I/II
			Audio / Nicam
			Mute / Dimmer
			1
			2
			4
			3
			5
			6
			7
			8
			9
			Back / Return
			0
			Sleep / Timer
			Shift + 1
			Shift + 2
			Smart / List



