



Original	Replacement	Original	Replacement
Power	Power	Up	Up
EPG	Guide / EPG / -/--	Display	Display / Media
REP	TV/Radio /	Left	Left
Mute	Mute / Dimmer	OK	OK
Rec List	Shift + Rec / Rec Mode	Right	Right
CH List	Smart / List	Menu	Menu / Home
Subtitle	Subtitle / EQ	Down	Down
Eject	Eject / Surround	Exit	Exit / Cancel / Clear
Rec	Rec / Rec Mode	1	1
Stop	Stop / Hold	2	2
I<<	I<< / Preset-	3	3
>>I	>>I / Preset+	4	4
Pause	Pause / Step / Freeze	5	5
Play	Play / Slow	6	6
<<	<< / Tune-	7	7
>>	>> / Tune+	8	8
Source	AV / Input / RDS	9	9





Original	Replacement
0	0
↶	RETURN BACK
FAV	PC FAV MARKER
▲ VOL	+ VOL
PICTURE	FORMAT PICTURE
NICAM/A2	LANG I/II AUDIO
▲ CH	+ CH PAGE
▼ VOL	- VOL
SOUND	TITLE SOUND
SLEEP	TIMER SLEEP
▼ CH	- CH PAGE
Red	NETFLIX SEARCH
Green	APP REPEAT
Yellow	YouTube REPEAT A-B
SCREEN	Prime Video RANDOM
TV/TXT SETUP	OPT-TOOLS SETUP
CANCEL D-MENU	TOP MENU D.MENU

Original	Replacement
REVEAL TITLE	SHIFT + TITLE SOUND
PRO	SHIFT + MEDIA DISPLAY
HOLD LAN	SHIFT + LIST SMART
SIZE A-B	SIZE ZOOM
SUBPAGE GOTO	GOTO TEXT
INDEX SLOW	ANGLE INFO



Cancel Menu