

 






 
 


 




 





 
 


 
 
 

 




 


 
 



 
 


 

 

 



 














Original	Replacement	Original	Replacement
 Power	 Power	 Stop / Reveal	 Stop
 Mute	 Mute	 << / Hold	 <<
 Red	 Red	 >> / Subpage	 >>
 Green	 Green	 I<< / Size	 I<<
 Yellow	 Yellow	 >>I / Cancel	 >>I
 Blue	 Blue	 Info	 Info
 EPG	 Guide	 Input	 AV
 Repeat	 D. Menu	 Up	 Up
 Zoom	 Eject	 Left	 Left
 Goto	 3D	 OK	 Ok
 Sub-T	 Subt	 Right	 Right
 Audio	 Dual	 Down	 Down
 Sleep	 Sleep	 Menu	 Menu
 TV/Radio	 TV/R	 Exit	 Exit
 Text	 Text	 Vol+	 Vol +
 Play / Index	 Play	 Vol-	 Vol -
 Pause / Mix	 Pause	 P-Mode	 Format





Original	Replacement	Original	Replacement
 S-Mode	 List	 Fav-	 Media
 CH+	 Ch +		
 CH-	 Ch -		
 1	 1		
 2	 2		
 3	 3		
 4	 4		
 5	 5		
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 -/--	 Shift + Guide		
 0	 0		
 Recall	 Back		
 Fav	 Pre Ch		
 Fav+	 Smart		

