



 

 
 
 
 
 
 



 
 







 












 

 






 
 
Original	Replacement
 Power On	 Power
 Power Off	 Shift + Power
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 Input Up	 Ch +
 Input Down	 Ch -
 Phono	 Shift + 1
 CD	 Shift + 2
 AMP	 Shift + 3
 Tuner	 Shift + 4
 AUX	 Shift + 5
 DVD	 Shift + 6
 CD-R	 Shift + 7
 Tape	 Shift + 8
 MD	 Shift + 9
 Source Direct	 AV

Original	Replacement
 Play CD	 Play
 Stop CD	 Stop
 Pause CD	 Pause
 >>  CD	 >>
  << CD	  <<
 Source Power	 Smart
 1 CD	 1
 2 CD	 2
 3 CD	 3
 4 CD	 4
 5 CD	 5
 6 CD	 6
 7 CD	 7
 8 CD	 8
 9 CD	 9
 0 CD	 0
 Clear CD	 Exit







 
















 

 
 
 

 



 

 
 

 

 


 
 
 
 

 
 
 


 

 

 
 




 






 



Original		Replacement		Original		Replacement	
	Source Power		Power		3 DVD		3
	Mute		Mute		4 DVD		4
	Vol+		Vol +		5 DVD		5
	Vol-		Vol -		6 DVD		6
	Play DVD		Play		7 DVD		7
	Pause DVD		Pause		8 DVD		8
	Stop DVD		Stop		9 DVD		9
	>>I DVD		>>I		0 DVD		0
	I<< DVD		I<<		Clear DVD		Exit
	Up DVD		Up		Memo DVD		Pre Ch
	Enter DVD		Ok		Display DVD		Info
	Down DVD		Down		Source Power		Shift + Power
	Right DVD		Right		Up AUX		Shift + Up
	Left DVD		Left		Down AUX		Shift + Down
	Menu DVD		Menu		Right AUX		Shift + Right
	1 DVD		1		Left AUX		Shift + Left
	2 DVD		2		Enter AUX		Shift + Ok







 


 

 
 














 








Original		Replacement		Original		Replacement	
	Vol+		Vol +		8 MD		8
	Vol-		Vol -		9 MD		9
	Mute		Mute		0 MD		0
	Source Power		Shift + Power		Clear MD		Exit
	Source Power		Power		Memo MD		Pre Ch
	Play MD		Play		Display MD		Info
	Stop MD		Stop		Up/Tune+		Up
	Pause MD		Pause		Right/Preset+		Right
	>>I MD		>>I		Down/Tune-		Down
	I<< MD		I<<		Left/Preset- Tuner		Left
	1 MD		1		Enter Tuner		Ok
	2 MD		2		P.Scan/A.Tune		D. Menu
	3 MD		3		Menu Tuner		Menu
	4 MD		4		CAT Tuner		Text
	5 MD		5		1 Tuner		Shift + 1
	6 MD		6		2 Tuner		Shift + 2
	7 MD		7		3 Tuner		Shift + 3







Original		Replacement		Original		Replacement	
	Source Power		Power		9 CD-R		9
	Play CD-R		Play		0 CD-R		0
	Pause CD-R		Pause		Clear CD-R		Exit
	Stop CD-R		Stop		Memo CD-R		Pre Ch
	>>I CD-R		>>I		Display CD-R		Info
	I<< CD-R		I<<		T.Mode CD-R		Format
	Vol+		Vol +		Source Power		Shift + Power
	Vol-		Vol -		Play Tape		Shift + Play
	Mute		Mute		Pause Tape		Shift + Pause
	1 CD-R		1		Stop Tape		Shift + Stop
	2 CD-R		2		>>I Tape		Shift + >>I
	3 CD-R		3		I<< Tape		Shift + I<<
	4 CD-R		4		1 Tape		Shift + 1
	5 CD-R		5		2 Tape		Shift + 2
	6 CD-R		6		3 Tape		Shift + 3
	7 CD-R		7		4 Tape		Shift + 4
	8 CD-R		8		5 Tape		Shift + 5



