



















 










Original	Replacement	Original	Replacement
 Standby	 Shift + Power	 CD	 3
 On	 Power	 CDR	 Guide / EPG / -/-
 HDMI	 AV / Input / RDS	 Tune	 6
 A/D	 Audio / Lang I/II	 M-XP	 5
 Test Tone	 Text / Goto	 Input Up	 >>I / Preset+
 SPKR A-B	 Setup / OPT /	 Mute	 Mute / Dimmer
 Z2	 Yellow / YouTube / Repeat	 Volume+	 Vol+
 Z3	 Blue / Prime Video / Random	 Input Down	 I<< / Preset-
 BD	 Green / APP / Repeat	 Display	 Display / Media
 DVD	 2	 Surr	 Eject / Surround
 VCR	 4	 Volume-	 Vol-
 SAT	 0	 Shift	 Back / Return
 GAME	 Fav / Marker / PC	 Up	 Up
 AUX1	 7	 Info	 Info / Angle
 Network	 9	 Search	 Red / Netflix / Search
 USB	 8	 Left	 Left
 TV	 1	 Enter	 OK





 







 



 







 



 



 

Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	Volume+		Vol+
	Display		Display / Media
	Memory		Smart / List
	Volume-		Vol-
	Up		Up
	Info		Info / Angle
	Left		Left
	Enter		OK
	Right		Right
	Menu		Menu / Home
	Down		Down
	Pause		Pause / Step / Freeze
	Play		Play / Slow
	Stop		Stop / Hold
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	<<		<< / Tune-
	>>		>> / Tune+
	1		1
	2		2
	3		3
	Repeat		Green / APP / Repeat
	4		4
	5		5
	6		6
	Random		Blue / Prime Video / Random
	7		7
	8		8
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	+10		Guide / EPG / -/-







Original		Replacement	
	Power		Power
	Mute		Mute / Dimmer
	Volume+		Vol+
	T.Mode		Text / Goto
	Display		Display / Media
	Memory		Setup / OPT /
	Volume-		Vol-
	Info		Info / Angle
	Enter		OK
	Menu		Menu / Home
	Band		Smart / List
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6

Original		Replacement	
	7		7
	8		8
	9		9
	CLR		Exit / Cancel / Clear
	0		0
	Tune-		<< / Tune-
	Tune+		>> / Tune+
	Preset-		I<< / Preset-
	Preset+		>>I / Preset+

