






 

 

 

 





 



 

 



 

 



 

 





 









 
 
 

 



















Original	Replacement
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Tv/Radio	 TV/R
 ←PR	 Back
 EPG	 Guide
 Menu	 Menu
 Info	 Info

Original	Replacement
 Exit	 Exit
 Up/PR+	 Up
 Down/PR-	 Down
 OK/List	 Ok
 Right	 Right
 Left	 Left
 Vol+	 Vol +
 Vol-	 Vol -
 ↑	 Ch +
 ↓	 Ch -
 Pause	 Pause
 [+]	 3D
 FAV	 Pre Ch
 UHF	 Smart
 PAL/NTSC	 Format
 TV/AV	 AV
 Red	 Red





Original	Replacement	Original	Replacement
 TXT Green	 B Green		
 Yellow	 C Yellow		
 Blue	 D Blue		
 AUDIO Audio	 SOUND DUAL Dual		
 TXT TXT	 REPEAT TEXT Text		
 [...] [...]	 AD SUBT Subt		
 Audio L/R	 SHIFT +  SOUND DUAL Shift + Dual		

Original	Replacement

