
 




Original	Replacement	Original	Replacement
 Power	 Power	 Ch-	 Down
 Mute	 Mute	 Vol+	 Vol +
 1	 1	 Vol+	 Right
 2	 2	 Vol-	 Vol -
 3	 3	 Vol-	 Left
 4	 4	 OK	 Ok
 5	 5	 Red/EPG	 Red
 6	 6	 Red/EPG	 Guide
 7	 7	 Yellow/Subtitle	 Yellow
 8	 8	 Yellow/Subtitle	 Subt
 9	 9	 Blue/TTX	 Text
 0	 0	 Blue/TTX	 Blue
 Menu	 Menu	 Green/Audio	 Green
 Exit	 Exit	 Green/Audio	 Dual
 Ch+	 Ch +	 i	 Info
 Ch+	 Up	 FAV	 Pre Ch
 Ch-	 Ch -	 TV/Radio	 TV/R





Original		Replacement		Original	Replacement
	Video		Format		
	Prog		Sleep		
	File		Media		
	Device		Smart		
	REC		Rec		
	Zoom		Eject		
	Stop		Stop		
	Prev		I<<		
	Next		>>I		
	Play/Pause		Play		
	Play/Pause		Pause		
	<<		<<		
	>>		>>		

