 


 





Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute / Dimmer
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Info		Info / Angle
	0		0
	EPG		Guide / EPG / -/--
	Settings		Setup / OPT /
	Up		Up
	Input		AV / Input / RDS

Original	Replacement	Original	Replacement
	Left		Left
	OK		OK
	Right		Right
	List		Smart / List
	Down		Down
	Back		Back / Return
	NETFLIX		Shift + Red / Netflix /
	YouTube		Shift + Yellow / YouTube /
	prime video		Shift + Blue / Prime
	Google Play		Shift + Green / APP /
	Vol+		Vol+
	Google Assistant		Display / Media
	P+		CH+ / Page+
	Vol-		Vol-
	Home		Menu / Home
	P-		CH- / Page-
	Text		Text / Goto





Original	Replacement	Original	Replacement
 USB	 +  Shift + 8		
 I/II	 Audio / Lang I/II		
 Subt	 Subtitle / EQ		
 Play / Text Mix	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop / Text Hold	 Stop / Hold		
 Text Size	 Zoom / Size		
 << / Text	 << / Tune-		
 I<< / Text Index	 I<< / Preset-		
 >>I / Text Reveal	 >>I / Preset+		
 >> / Text Cancel	 >> / Tune+		
 Red	 Red / Netflix / Search		
 Green	 Green / APP / Repeat		
 Yellow	 Yellow / YouTube / Repeat		
 Blue	 Blue / Prime Video / Random		

