

 



 































 








 



 














 





| Original | Replacement | Original | Replacement |
|--|---|--|--|
|  Power |  Power |  Menu |  Menu / Home |
|  Mute |  Mute / Dimmer |  Exit |  Exit / Cancel / Clear |
|  Nicam/A2 |  Shift + Audio / Lang I/II |  1 |  1 |
|  Sleep |  Sleep / Timer |  2 |  2 |
|  Aspect |  Shift + Picture / Format |  3 |  3 |
|  Media |  Shift + Display / Media |  4 |  4 |
|  Display |  Display / Media |  5 |  5 |
|  Auto |  Smart / List |  6 |  6 |
|  P.Mode |  Picture / Format |  7 |  7 |
|  S.Mode |  Sound / Title |  8 |  8 |
|  DTV |  D.Menu / Top |  9 |  9 |
|  Source |  AV / Input / RDS |  0 |  0 |
|  Up |  Up |  -/-- |  Shift + Guide / EPG / -/-- |
|  Left |  Left |  Recall |  Back / Return |
|  Enter |  OK |  CH+ |  CH+ / Page+ |
|  Right |  Right |  Info |  Info / Angle |
|  Down |  Down |  Audio |  Audio / Lang I/II |





| Original | | Replacement | | Original | | Replacement | |
|---|-------------|---|-----------------------|---|------------|---|------------------------------|
|  | Vol+ |  | Vol+ |  | Stop |  | Stop / Hold |
|  | CH- |  | CH- / Page- |  | Rec/Repeat |  | Rec / Rec Mode |
|  | FAV |  | Fav / Marker / PC |  | Rec/Repeat |  | Shift + Green / APP / REPEAT |
|  | Tv/Radio |  | TV/Radio / |  | T-Shift |  | Eject / Surround |
|  | Vol- |  | Vol- |  | Red |  | Red / Netflix / Search |
|  | Text |  | Text / Goto |  | Green |  | Green / APP / Repeat |
|  | EPG |  | Guide / EPG / -/- |  | Yellow |  | Yellow / YouTube / Repeat |
|  | Subtitle |  | Subtitle / EQ |  | Cyan |  | Blue / Prime Video / Random |
|  | Index |  | Setup / OPT / | | | | |
|  | <</Hold |  | << / Tune- | | | | |
|  | <</Hold |  | Shift + Stop / | | | | |
|  | Size |  | Zoom / Size | | | | |
|  | >> |  | >> / Tune+ | | | | |
|  | I<</Reveal |  | I<< / Preset- | | | | |
|  | >>I/Subpage |  | >>I / Preset+ | | | | |
|  | Play |  | Play / Slow | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |

