

| Original    | Replacement                                                                                          | Original   | Replacement                                                                                               |
|-------------|------------------------------------------------------------------------------------------------------|------------|-----------------------------------------------------------------------------------------------------------|
| On/Off      |  Power              | OK Enter   |  OK                    |
| Mute        |  Mute / Dimmer      | Menu Right |  Right                 |
| Txt Stop    |  Stop / Hold        | Menu Off   |  Exit / Cancel / Clear |
| Menu audio  |  Audio / Lang I/II  | Menu Down  |  Down                  |
| Subt.List   |  Subtitle / EQ      | Back       |  Back / Return         |
| Reveal      |  Picture / Format   | Volume+    |  Vol+                  |
| Txt Expand  |  Zoom / Size        | Chan.Up    |  CH+ / Page+           |
| Sleep Timer |  Sleep / Timer      | Volume-    |  Vol-                  |
| Return TV   |  TV/Radio /         | Display    |  Display / Media       |
| Menu video  |  D.Menu / Top       | Chan.Down  |  CH- / Page-           |
| Update      |  Setup / OPT /     | 1          |  1                    |
| Text        |  Text / Goto      | 2          |  2                   |
| TV/AV       |  AV / Input / RDS | 3          |  3                   |
| Menu        |  Menu / Home      | 4          |  4                   |
| Menu Up     |  Up               | 5          |  5                   |
| Info        |  Info / Angle     | 6          |  6                   |
| Menu Left   |  Left             | 7          |  7                   |



**Power** **DIMMER MUTE** **SHIFT**  
**TV** **DVD** **SAT** **AUX**  
 SLOW STEP-FREEZE HOLD REC MODE  
 [Play] [Pause] [Stop] [Red Stop]  
 TUNE- TUNE+ PRESET- PRESET+  
 [Previous] [Next] [First] [Last]  
 TITLE LANG I/II EQ SURROUND  
 SOUND AUDIO SUBTITLE [Up Arrow]  
 FORMAT SIZE TIMER PROGRAM  
 PICTURE ZOOM SLEEP TV/ RADIO  
 TOP MENU OPT-TOOLS GOTO RDS  
 D.MENU SETUP TEXT AV INPUT  
 HOME ANGLE  
 MENU INFO  
 [Left Arrow] [OK] [Right Arrow]  
 [Up Arrow] [Down Arrow]  
 CLEAR RETURN  
 EXIT BACK  
 CANCEL LIST  
 + VOL - SMART +  
 MEDIA CH  
 DISPLAY PAGE  
 TV DVD CD - STB  
 1 2 3  
 VIDEO TAPE TUNER  
 4 5 6  
 AUX - HDD USB BLUETOOTH  
 7 8 9  
 -/+ HDMI - SAT PC  
 GUIDE 0 FAV  
 EPG MARKER  
 [Netflix] [App] [YouTube] [Prime Video]  
 SEARCH REPEAT REPEAT A-B RANDOM  
**Mandis**  
 shop  
 www.mandis.tv