



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	Source		AV
	Radio / Angle		TV/R
	List/USB		List
	EPG/+10		Guide
	Still		Pause
	Aspect		Format
	OO/I/II Audio		Dual
	FAV+/Prog		Smart
	FAV-/Repeat		Media
	Info		Info
	Sleep		Sleep
	PIC		Shift + Format
	Sound		Shift + Dual
	Menu		Menu
	Exit		Exit
	Up		Up
	Left		Left
	Enter		Ok
	Right		Right
	Down		Down
	CH-		Ch -
	CH+		Ch +
	Vol-		Vol -
	Vol+		Vol +
	Recall		Back
	Text/Left Arrow		Text
	Text/Left Arrow		Left Arrow
	Mix/Right Arrow		Shift + Text
	Mix/Right Arrow		Right Arrow
	[Subtitles]/Subtitles		Subtitles
	Index / Play		Play
	Hold/Left Arrow		Left Arrow





Original		Replacement		Original		Replacement	
	Size/>>>I		>>I		Green/Title		Green
	Cancel/Stop		Stop		Yellow/Setup		Yellow
	Reveal/Open/Close/Rec		Rec		Yellow/Setup		Options
	Reveal/Open/Close/Rec		Eject		Blue/D.Menu		Blue
	1		1		Blue/D.Menu		D. Menu
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				
	7		7				
	8		8				
	9		9				
	0		0				
	Page-		Shift + Ch -				
	Page+		Shift + Ch +				
	Red/Goto		Red				

