


 



 



 

 




 
 
 
 

 

 

 

 

 

 

 

 

 

Original	Replacement
On/Standby	Power
Display	Display / Media
DVD / BD	Shift + 2
VCR / DVR	Shift + 4
CBL/SAT	Shift + 0
Game	Shift + 9
AUX	Shift + 7
TV / TAPE	Shift + 5
TV / TAPE	Shift + 1
TUNER	Shift + 6
PORT	Shift + 8
CD	Shift + 3
Muting	Mute / Dimmer
CH/Disc/Album +	CH + / Page+
Vol+	Vol+
CH/Disc/Album-	CH- / Page-
Vol-	Vol-

Original	Replacement
Up	Up
Left	Left
Enter	OK
Right	Right
Setup	Setup / OPT /
Down	Down
Return	Back / Return
Audio	Audio / Lang I/II
I<<	I<< / Preset-
>>I	>>I / Preset+
<<	<< / Tune-
Play	Play / Slow
>>	>> / Tune+
Pause	Pause / Step / Freeze
Stop	Stop / Hold
Movie Tv	Red / Netflix / Search
Music	Green / APP / Repeat





Original	Replacement
 Power BD/DVD	 Power
 DVD/BD	 Smart / List
 CBL/SAT	 Display / Media
 Vol+ Receiver	 Vol+
 Vol- Receiver	 Vol-
 Top Menu	 D.Menu / Top
 Up BD/DVD	 Up
 Menu BD/DVD	 Menu / Home
 Left BD/DVD	 Left
 Enter BD/DVD	 OK
 Right BD/DVD	 Right
 Setup BD/DVD	 Setup / OPT /
 Down BD/DVD	 Down
 Return BD/DVD	 Back / Return
 Audio BD/DVD	 Audio / Lang I/II
 I<< BD/DVD	 I<< / Preset-
 >>I BD/DVD	 >>I / Preset+

Original	Replacement
 << BD/DVD	 << / Tune-
 Play BD/DVD	 Play / Slow
 >> BD/DVD	 >> / Tune+
 Pause BD/DVD	 Pause / Step / Freeze
 Stop BD/DVD	 Stop / Hold
 Search BD/DVD	 Red / Netflix / Search
 Repeat BD/DVD	 Green / APP / Repeat
 Random	 Blue / Prime Video / Random
 Play Mode	 Yellow / YouTube / Repeat
 1 BD/DVD	 1
 2 BD/DVD	 2
 3 BD/DVD	 3
 4 BD/DVD	 4
 5 BD/DVD	 5
 6 BD/DVD	 6
 7 BD/DVD	 7
 8 BD/DVD	 8


 













 
 


 


 

 


 


 

 

 
 

 

 

 

 







 





Original		Replacement		Original		Replacement	
	9 BD/DVD		9		<< CBL/SAT	+	Shift + << /
	+10/--/-10		Guide / EPG / --		Play CBL/SAT	+	Shift + Play /
	0/11 BD/DVD		0		>> CBL/SAT	+	Shift + >> /
	CLR/12 BD/DVD		Fav / Marker / PC		Pause CBL/SAT	+	Shift + Pause / Step /
	CLR/12 BD/DVD		Exit / Cancel / Clear		Stop CBL/SAT	+	Shift + Stop /
	Power CBL/SAT	+	Shift + Power		Movie Tv/Search CBL/SAT	+	Shift + Red / Netflix /
	CH Disc/Album+ CBL/SAT	+	Shift + CH+ /		Music/Repeat CBL/SAT	+	Shift + Green / APP /
	CH Disc/Album- CBL/SAT	+	Shift + CH- /		Game/Random	+	Shift + Yellow / YouTube /
	Guide CBL/SAT	+	Shift + Guide / EPG / --		Stereo/Play Mode CBL/SAT	+	Shift + Blue / Prime
	Up CBL/SAT	+	Shift + Up		1 CBL/SAT	+	Shift + 1
	Menu/Prev CH CBL/SAT	+	Shift + Menu /		2 CBL/SAT	+	Shift + 2
	Left CBL/SAT	+	Shift + Left		3 CBL/SAT	+	Shift + 3
	Enter CBL/SAT	+	Shift + OK		4 CBL/SAT	+	Shift + 4
	Right CBL/SAT	+	Shift + Right		5 CBL/SAT	+	Shift + 5
	Setup CBL/SAT	+	Shift + Setup / OPT / Tools		6 CBL/SAT	+	Shift + 6
	Down CBL/SAT	+	Shift + Down		7 CBL/SAT	+	Shift + 7
	Return CBL/SAT	+	Shift + Back / Return		8 CBL/SAT	+	Shift + 8





Original	Replacement	Original	Replacement
 Power CD	 Power	 Play CD	 Play / Slow
 CD	 Smart / List	 >> CD	 >> / Tune+
 CH/Disc+ CD	 CH+ / Page+	 Pause CD	 Pause / Step / Freeze
 Vol+ Receiver	 Vol+	 Stop CD	 Stop / Hold
 CH/Disc- CD	 CH- / Page-	 Search CD	 Red / Netflix / Search
 Vol- Receiver	 Vol-	 Repeat CD	 Green / APP / Repeat
 Up CD	 Up	 Random CD	 Blue / Prime Video / Random
 Left CD	 Left	 Play Mode CD	 Yellow / YouTube / Repeat
 Enter CD	 OK	 1 CD	 1
 Right CD	 Right	 2 CD	 2
 Setup CD	 Setup / OPT /	 3 CD	 3
 Down CD	 Down	 4 CD	 4
 Return CD	 Back / Return	 5 CD	 5
 Audio CD	 Audio / Lang I/II	 6 CD	 6
 I<< CD	 I<< / Preset-	 7 CD	 7
 >>I CD	 >>I / Preset+	 8 CD	 8
 << CD	 << / Tune-	 9 CD	 9





Original		Replacement		Original		Replacement	
	Power Receiver Zone 2		Power		>> Zone 2		>> / Tune+
	CH Disc/Album+ Zone 2		CH+ / Page+		Pause Zone 2		Pause / Step / Freeze
	Vol+ Zone 2		Vol+		Stop Zone 2		Stop / Hold
	CH Disc/Album- Zone 2		CH- / Page-		Movie Tv Zone		Red / Netflix / Search
	Vol- Zone 2		Vol-		Music Zone 2		Green / APP / Repeat
	Up Zone 2		Up		Game Zone 2		Yellow / YouTube / Repeat
	Left Zone 2		Left		Stereo Zone 2		Blue / Prime Video / Random
	Enter Zone 2		OK		1 Zone 2		1
	Right Zone 2		Right		2 Zone 2		2
	Setup Zone 2		Setup / OPT /		3 Zone 2		3
	Down Zone 2		Down		4 Zone 2		4
	Return Zone 2		Back / Return		5 Zone 2		5
	Audio Zone 2		Audio / Lang I/II		6 Zone 2		6
	I<< Zone 2		I<< / Preset-		7 Zone 2		7
	>>I Zone 2		>>I / Preset+		8 Zone 2		8
	<< Zone 2		<< / Tune-		9 Zone 2		9
	Play Zone 2		Play / Slow		+10/--/--10/D.Tun/Dimmer Zone 2		Guide / EPG / -/-



