 


 


 
 
 
 




 

 

 

 

 
 
 




 




 
 
 
 
 
 
 

 

 

 
 
 

 

 




 
 



 









Original		Replacement		Original		Replacement	
	On/Standby		Power		1 Receiver		1
	Display		Info		2 Receiver		2
	Enter Receiver		Ok		3 Receiver		3
	Up Receiver		Up		4 Receiver		4
	Down Receiver		Down		5 Receiver		5
	Right Receiver		Right		6 Receiver		6
	Left Receiver		Left		7 Receiver		7
	Return Receiver		Back		8 Receiver		8
	Setup Receiver		Smart		9 Receiver		9
	Home/Audio		Media		0/11 Receiver		0
	Play Receiver		Play		+10/--/---10/Dimmer/D.Tun Receiver		Shift + Guide
	I<< Receiver		I<<		CLR/Sleep/12 Receiver		Pre Ch
	>>I Receiver		>>I		Movie Tv/Search Receiver		Red
	<< Receiver		<<		Music/Repeat Receiver		Green
	>> Receiver		>>		Game/Random Receiver		Yellow
	Pause/Play reverse Receiver		Pause		THX / Play Mode Receiver		Blue
	Stop Receiver		Stop		Muting Receiver		Mute





 




 
 


 


 
 
 

 
 
 

 

 
 

 
 





 



 



 



 

 

 

 
 
 


 

 




 





Original	Replacement	Original	Replacement
 Vol+ Receiver	 Vol +	 Movie/TV/Search	 Options
 Vol- Receiver	 Vol -	 Music/Repeat	 Dual
 CH/Disc/Album+ Receiver	 Ch +	 Game/Random	 Subt
 CH/Disc/Album- Receiver	 Ch -	 Stereo/Play Mode	 TV/R
 Power Tv	 Shift + Power	 1 Tv	 Shift + 1
 Input Tv	 AV	 2 Tv	 Shift + 2
 CH+ Tv	 Shift + Ch +	 3 Tv	 Shift + 3
 CH- Tv	 Shift + Ch -	 4 Tv	 Shift + 4
 Up Tv	 Shift + Up	 5 Tv	 Shift + 5
 Enter Tv	 Shift + Ok	 6 Tv	 Shift + 6
 Down Tv	 Shift + Down	 7 Tv	 Shift + 7
 Right Tv	 Shift + Right	 8 Tv	 Shift + 8
 Left Tv	 Shift + Left	 9 Tv	 Shift + 9
 Menu/Prev CH	 Menu	 0/11 Tv	 Shift + 0
 Guide/Top Menu	 Shift + Menu	 +10/--/--10 Tv	 Guide
 Return Tv	 Shift + Back	 CLR/Sleep/12	 Shift + Pre Ch
 Setup Tv	 Shift + Smart	 Vol+ Tv	 Shift + Dual









Original	Replacement	Original	Replacement
 Power BD/DVD	 Power	 Stop BD/DVD	 Stop
 Menu/Prev CH	 Menu	 Movie Tv/Search BD/DVD	 Red
 Top Menu/Guide BD/DVD	 Options	 Music/Repeat	 Green
 Setup BD/DVD	 Smart	 Game/Random	 Yellow
 Return BD/DVD	 Back	 Stereo/Play Mode BD/DVD	 Blue
 Audio BD/DVD	 Media	 1 BD/DVD	 1
 Enter BD/DVD	 Ok	 2 BD/DVD	 2
 Up BD/DVD	 Up	 3 BD/DVD	 3
 Down BD/DVD	 Down	 4 BD/DVD	 4
 Right BD/DVD	 Right	 5 BD/DVD	 5
 Left BD/DVD	 Left	 6 BD/DVD	 6
 I<< BD/DVD	 I<<	 7 BD/DVD	 7
 >>I BD/DVD	 >>I	 8 BD/DVD	 8
 << BD/DVD	 <<	 9 BD/DVD	 9
 >> BD/DVD	 >>	 0/11 BD/DVD	 0
 Play BD/DVD	 Play	 +10/--10/D.Tun/Dimmer BD/DVD	 Guide
 Pause/Play rev. BD/DVD	 Pause	 CLR/Sleep/12	 Pre Ch



BD/DVD






 
 
 

 

 



 


 

 

 

 
 
 

 

 
 
 



 
 
Original		Replacement		Original		Replacement	
	CBL/SAT		Text		Stop CBL/SAT		Shift + Stop
	Muting Receiver		Mute		<< CBL/SAT		Shift + Ch -
	Vol+ Receiver		Vol +		>> CBL/SAT		Shift + Ch +
	Vol- Receiver		Vol -		Play CBL/SAT		3D
	Power CBL/SAT		Shift + Power		Movie Tv/Search CBL/SAT		Dual
	CH Disc/Album+ CBL/SAT		Ch +		Music/Repeat CBL/SAT		Subt
	CH Disc/Album- CBL/SAT		Ch -		Game/Random		AV
	Menu/Prev CH CBL/SAT		Shift + Menu		Stereo/Play Mode CBL/SAT		Format
	Top Menu/Guide CBL/SAT		Shift + Options		1 CBL/SAT		Shift + 1
	Return CBL/SAT		Shift + Back		2 CBL/SAT		Shift + 2
	Setup CBL/SAT		Shift + Smart		3 CBL/SAT		Shift + 3
	Up CBL/SAT		Shift + Up		4 CBL/SAT		Shift + 4
	Enter CBL/SAT		Shift + Ok		5 CBL/SAT		Shift + 5
	Down CBL/SAT		Shift + Down		6 CBL/SAT		Shift + 6
	Right CBL/SAT		Shift + Right		7 CBL/SAT		Shift + 7
	Left CBL/SAT		Shift + Left		8 CBL/SAT		Shift + 8
	Pause/Play rev. CBL/SAT		Shift + Pause		9 CBL/SAT		Shift + 9









 


 
 
 




 







 






 
 




 


 
 

 

 


 
 
 

 
 


 
 
 
 

 

 

 




 

 
Original		Replacement		Original		Replacement	
	Power CD		Power		Stop CD		Stop
	CH/Disc+ CD		Ch +		Movie Tv/Search		Red
	CH/Disc- CD		Ch -		Music/Repeat		Green
	Return CD		Back		Game/Random		Yellow
	Setup CD		Smart		Stereo/Play Mode		Blue
	Audio CD		Media		1 CD		1
	Up CD		Up		2 CD		2
	Down CD		Down		3 CD		3
	Right CD		Right		4 CD		4
	Left CD		Left		5 CD		5
	Enter CD		Ok		6 CD		6
	I<< CD		I<<		7 CD		7
	>>I CD		>>I		8 CD		8
	<< CD		<<		9 CD		9
	>> CD		>>		0/11 CD		0
	Play CD		Play		+10/--10/D.Tun/ Dimmer CD		Guide
	Pause CD		Pause		CLR/Sleep/12		Pre Ch









Original	Replacement	Original	Replacement
 Power Receiver Zone 2	 Power	 >> Zone 2	 >>
 Muting Receiver	 Mute	 << Zone 2	 <<
 Vol+ Zone 2	 Vol +	 Pause Zone 2	 Pause
 Vol- Zone 2	 Vol -	 Stop Zone 2	 Stop
 CH Disc/Album+ Zone 2	 Ch +	 Movie Tv/Search Zone 2	 Red
 CH Disc/Album- Zone 2	 Ch -	 Music/Repeat	 Green
 Up Zone 2	 Up	 Game/Random	 Yellow
 Enter Zone 2	 Ok	 Stereo/Play Mode Zone 2	 Blue
 Down Zone 2	 Down	 1 Zone 2	 1
 Right Zone 2	 Right	 2 Zone 2	 2
 Left Zone 2	 Left	 3 Zone 2	 3
 Return Zone 2	 Back	 4 Zone 2	 4
 Setup Zone 2	 Smart	 5 Zone 2	 5
 Audio Zone 2	 Media	 6 Zone 2	 6
 I<< Zone 2	 I<<	 7 Zone 2	 7
 >>I Zone 2	 >>I	 8 Zone 2	 8
 Play Zone 2	 Play	 9 Zone 2	 9



