












 
 
 
 
 

 










 





 

 

 





 

 


 
 




 

 
 



 
 
 





Original	Replacement
 Power	 Power
 Open/Close VCR	 Pre Ch
 Open/Close	 Guide
 DVD/VCR	 Media
 Input Select	 Shift + AV
 Display	 Info
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Up	 Up

Original	Replacement
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 P+	 Ch +
 P-	 Ch -
 TRK+	 Vol +
 TRK-	 Vol -
 Setup	 Options
 Cancel	 Exit
 Return	 Back
 Title Menu/Top	 Menu
 DVD Menu	 D. Menu
 One Touch	 Green
 Repeat A-B	 Text
 Play Mode/Repeat	 Shift + Play
 Zoom	 Eject





Original	Replacement
CM Skip	Yellow
Audio/Audio	Dual
Subtitle/ATR	Subt
Progressive	Smart
Clock/Counter	3D
Angle/00:00:00	Red
LZero	Format
Timer Rec	AV
Rec Mode / Speed	Shift + Rec
Dubbing	Blue
TV/VCR	TV/R
<<<	<<<
Play	Play
>>>	>>>
I<<< Skip Index -	I<<<
Stop	Stop
I>>> Skip	I>>>

Original	Replacement
Rec/OTR	Rec
Pause II	Pause
I>	List

