



| Original | | Replacement | | Original | | Replacement | |
|---|-----------|---|--------------------|---|--------|---|-----------------------|
|  | Mute |  | Mute / Dimmer |  | Up |  | Up |
|  | Power |  | Power |  | Left |  | Left |
|  | 1 |  | 1 |  | OK |  | OK |
|  | 2 |  | 2 |  | Right |  | Right |
|  | 3 |  | 3 |  | Down |  | Down |
|  | 4 |  | 4 |  | Exit |  | Exit / Cancel / Clear |
|  | 5 |  | 5 |  | Recall |  | Back / Return |
|  | 6 |  | 6 |  | Menu |  | Menu / Home |
|  | 7 |  | 7 |  | CH+ |  | CH+ / Page+ |
|  | 8 |  | 8 |  | Text |  | Text / Goto |
|  | 9 |  | 9 |  | Option |  | Setup / OPT / |
|  | EPG |  | Guide / EPG / -/-- |  | Vol+ |  | Vol+ |
|  | 0 |  | 0 |  | CH- |  | CH- / Page- |
|  | List |  | Smart / List |  | F1 |  | Shift + 1 |
|  | Mode |  | D.Menu / Top |  | F2 |  | Shift + 2 |
|  | i |  | Info / Angle |  | Vol- |  | Vol- |
|  | TV/R Live |  | TV/Radio / |  | Rec |  | Rec / Rec Mode |





| Original | | Replacement | | Original | | Replacement | |
|--|---------|--|-----------------------------|----------|--|-------------|--|
|  | Play |  | Play / Slow | | | | |
|  | Archive |  | Display / Media | | | | |
|  | << |  | << / Tune- | | | | |
|  | Stop |  | Stop / Hold | | | | |
|  | Pause |  | Pause / Step / Freeze | | | | |
|  | >> |  | >> / Tune+ | | | | |
|  | Red |  | Red / Netflix / Search | | | | |
|  | Green |  | Green / APP / Repeat | | | | |
|  | Yellow |  | Yellow / YouTube / Repeat | | | | |
|  | Blue |  | Blue / Prime Video / Random | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |
| | | | | | | | |

