





Original	Replacement	Original	Replacement
 Power	 Power	 Left	 Left
 Red/Rec/Instant	 Red	 Vol+	 Vol +
 Green/<<	 Green	 Vol-	 Vol -
 Yellow/Stop	 Yellow	 Mute	 Mute
 Blue/play	 Blue	 P+	 Ch +
 White/>>/□	 >>	 P-	 Ch -
 >♦	 D. Menu	 1	 1
 []	 Guide	 2	 2
 [o]/Timer	 Sleep	 3	 3
 [?]	 Eject	 4	 4
 [♦]	 Format	 5	 5
 [≡]/Text	 Text	 6	 6
 Menu	 Menu	 7	 7
 OK	 Ok	 8	 8
 Up	 Up	 9	 9
 Down	 Down	 0	 0
 Right	 Right	 P<P	 Pre Ch





Original		Replacement		Original		Replacement	
	[i+]		Info				
	I-II		Dual				
	[> <]		Subt				
	[1 2]		3D				
	[]->		AV				
	Smart		Smart				
	[] Smart		Media				
	[<>]		Back				
	[-o-]/Active Control		Options				





Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/<<		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/>>/□		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual



 






Original	Replacement	Original	Replacement
 [> <]	 Subt		
 [I I 2]	 3D		
 [] →]	 AV		
 ♪ Smart	 Smart		
 [] Smart	 Media		
 [<>]	 Back		
 [-o-]/Active Control	 Options		





Original		Replacement		Original		Replacement	
	Power		Power		Vol-		Vol -
	Red/Rec/Instant		Red		Mute		Mute
	Green/Left		Green		P+		Ch +
	Yellow/Stop		Yellow		P-		Ch -
	Blue/Play		Blue		1		1
	White/Right		>>		2		2
	[o]/Timer		Sleep		3		3
	[?]		Eject		4		4
	[♦]		Format		5		5
	[≡]/Text		Text		6		6
	Menu		Menu		7		7
	OK		Ok		8		8
	Up		Up		9		9
	Down		Down		0		0
	Right		Right		P<P		Pre Ch
	Left		Left		[i+]		Info
	Vol+		Vol +		I-II		Dual





Original	Replacement	Original	Replacement
[> <]	Subt		
[1 2]	3D		
[]→	AV		
♪ Smart	Smart		
[] Smart	Media		
[<>]	Back		
[-o-]/Active Control	Options		

