 



 


 



 
 
 
 
 
 

 
 
 
 
 

 

 
 
 
 


 
 
 

 

 

 
 
 

 
 
 
 

 
 


 




 


 












Original	Replacement	Original	Replacement
 Power	 Power	 i	 DISPLAY INFO Info
 AV	 TIMER AV AV	 + P P+	 + CH Ch +
 1	 1	 - P P-	 - CH Ch -
 2	 2	 MENU	 TOP MENU MENU Menu
 3	 3	 EXIT	 CLEAR EXIT Exit
 4	 4	 OPTION	 SETTINGS OPT Options
 5	 5	 BACK/RETURN	 RETURN BACK Back
 6	 6		
 7	 7		
 8	 8		
 9	 9		
 0	 0	 OK	 OK Ok
 STILL	 PICTURE FORMAT Format	 TV	 SEARCH TV/R TV/R
	 FAV PRE-CH Pre Ch	 MEDIA	 APP MEDIA Media
 + Vol+	 + VOL Vol +	 GUIDE	 - / - GUIDE Guide
 - Vol-	 VOL Vol -		 ECO 3D 3D
 Mute	 MUTE Mute	 TIMER	 SHIFT + TIMER AV Shift + AV





Original	Replacement	Original	Replacement
 Text	 Text		
 Red	 Red		
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Audio	 Dual		
 STTL	 Subt		
 Sound	 Shift + Dual		
 <<	 <<		
 Pause	 Pause		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

