 



 















 



















 





 




 




















| Original   | Replacement  | Original   | Replacement   |
|--|--|--|---|
|  Power        |  Power                    |  CH-          |  CH- / Page-                   |
|  TV Power     |  Shift + Power            |  7            |  7                             |
|  TV Vol+      |  Shift + Vol+             |  8            |  8                             |
|  TV Vol+      |  Vol+                     |  9            |  9                             |
|  TV CH+       |  Shift + CH+ /            |  ShowView     |  Picture / Format              |
|  Drive Select |  Text / Goto              |  */Delete     |  Shift + Exit / Cancel / Clear |
|  TV AV        |  Shift + AV / Input / RDS |  0            |  0                             |
|  TV Vol-      |  Shift + Vol-             |  Input Select |  AV / Input / RDS              |
|  TV Vol-      |  Vol-                     |  Status       |  Info / Angle                  |
|  TV CH-      |  Shift + CH- /           |  I<< Skip    |  I<< / Preset-                |
|  1          |  1                      |  Skip >>I   |  >>I / Preset+               |
|  2          |  2                      |  <<         |  << / Tune-                  |
|  3          |  3                      |  >>         |  >> / Tune+                  |
|  CH+        |  CH+ / Page+            |  Stop       |  Stop / Hold                 |
|  4          |  4                      |  Pause      |  Pause / Step / Freeze       |
|  5          |  5                      |  Play / 1.3 |  Play / Slow                 |
|  6          |  6                      |  Time Slip  |  Sleep / Timer               |





| Original                | Replacement                 |
|-------------------------|-----------------------------|
| Prog / Check            | TV/Radio /                  |
| Exit                    | Exit / Cancel / Clear       |
| Direct Navigator        | Smart / List                |
| Left / <                | Left                        |
| Up                      | Up                          |
| Right /   >             | Right                       |
| Function Menu           | Menu / Home                 |
| OK                      | OK                          |
| Option                  | Setup / OPT /               |
| Down                    | Down                        |
| Return                  | Back / Return               |
| Red / Audio             | Audio / Lang I/II           |
| Red / Audio             | Red / Netflix / Search      |
| Green / Display         | Display / Media             |
| Green / Display         | Green / APP / Repeat        |
| Yellow / Create Chapter | Yellow / YouTube / Repeat   |
| Blue / Manual Skip      | Blue / Prime Video / Random |

| Original      | Replacement            |
|---------------|------------------------|
| Rec           | Rec / Rec Mode         |
| Rec Mode      | Shift + Rec / Rec Mode |
| Ext Link      | D.Menu / Top           |
| Direct Tv Rec | Eject / Surround       |
|               |                        |
|               |                        |
|               |                        |
|               |                        |
|               |                        |
|               |                        |
|               |                        |
|               |                        |
|               |                        |
|               |                        |
|               |                        |
|               |                        |

