



Original	Replacement
	 Power
	 Shift + Power
	 Shift + Vol+
	 Shift + 2
	 Shift + AV / Input / RDS
	 Shift + Vol-
	 TV/Radio /
	 1
	 2
	 3
	 AV / Input / RDS
	 4
	 5
	 6
	 Fav / Marker / PC
	 7
	 8

Original	Replacement
	 9
	 Vol+
	 Exit / Cancel / Clear
	 0
	 Guide / EPG / +/-
	 Vol-
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 Stop / Hold
	 Pause / Step / Freeze
	 Play / Slow
	 D.Menu / Top
	 Up
	 Menu / Home
	 Left





Original	Replacement
	OK
	Right
	Setup / OPT /
	Down
	Back / Return
	Sound / Title
	Subtitle / EQ
	Picture / Format
	Audio / Lang I/II
	Display / Media
	Text / Goto
	Smart / List
	Mute / Dimmer

Original	Replacement

