





 
 



 


 
 
 

 
 
 


 



 
 


 






Original	Replacement	Original	Replacement
	Power		Up
	Stop		Down
	Pause		Right
	Rec		Left
	<<		Ok
	Play		Ch +
	>>		Ch -
	Source		Vol +
	[] / TV		Vol -
	[<>] / Format		Mute
	Home		Red
	Smart TV		Green
	List		Yellow
	[i] / Info		Blue
	Adjust		1
	Options		2
	Back		3



