 

 

 

 

















 



 





 

 



 



 

 
 
 

 

 

 

 

 


















 


 

 



 





Original	Replacement
	 Power
	 1
	 2
	 3
	 Green / APP / Repeat
	 Blue / Prime Video / Random
	 TV/Radio /
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Display / Media
	 Guide / EPG / -/--
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold

Original	Replacement
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right





 



 



















 











 

 

 

 

 

 

 

 

Original	Replacement
	 Power
	 Sleep / Timer
	 Shift + Sleep / Timer
	 Guide / EPG / -/-
	 Pause / Step / Freeze
	 Mute / Dimmer
	 Vol-
	 Vol+
	 Play / Slow
	 Stop / Hold
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 AV / Input / RDS
	 Picture / Format
	 Zoom / Size

Original	Replacement
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right



 

 




 




 









 

 



 

 

 

 



 
 
 







 

Original	Replacement
	Repeat  Green / APP / Repeat
	Power 
	Shuffle  Blue / Prime Video / Random
	Program  TV/Radio /
	Sleep  Sleep / Timer
	Timer  Shift + Sleep / Timer
	Display  Display / Media
	Pause  Pause / Step / Freeze
	Mute  Mute / Dimmer
	Vol- 
	Vol+ 
	Play  Play / Slow
	Stop  Stop / Hold
	I<  I<< / Preset-
	>I  >>I / Preset+
	<<  << / Tune-
	>>  >> / Tune+

Original	Replacement
	Inc. Surr.  AV / Input / RDS
	Flat  Picture / Format
	Loudness  Zoom / Size
	Bass- 
	Bass+ 
	Treble-  CH- / Page-
	Treble+  CH+ / Page+
	Balance L 
	Balance R 





Original	Replacement
	 Power
	 +  Shift + Power
	 7
	 TV/Radio /
	 Sleep / Timer
	 +  Shift + Sleep / Timer
	 Display / Media
	 Mute / Dimmer
	 Vol-
	 Vol+
	 I<< / Preset-
	 >>I / Preset+
	 << / Tune-
	 >> / Tune+
	 AV / Input / RDS
	 Picture / Format
	 Sound / Title

Original	Replacement
	 Down
	 Up
	 CH- / Page-
	 CH+ / Page+
	 Left
	 Right

