
 

 

 
 


 



 

 

 




 






Original	Replacement
 Eject	 Eject / Surround
 Standby/On	 Power
 Menu	 Menu / Home
 Status/Exit	 Exit / Cancel / Clear
 Clear	 Shift + Exit / Cancel / Clear
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Sleep	 Sleep / Timer
 0	 0
System	Smart / List

Original	Replacement
 Record/OTR	 Rec / Rec Mode
 Up	 Up
 Play	 Play / Slow
 > </Still	 Pause / Step / Freeze
 <<	 << / Tune-
 Left	 Left
 Right	 Right
 >>	 >> / Tune+
 P+	 CH+ / Page+
 Stop	 Stop / Hold
 Down	 Down
 Vol+	 Vol+
 P-	 CH- / Page-
 Mute	 Mute / Dimmer
 Vol-	 Vol-
 Red/SV/V+	 Red / Netflix / Search
Green/Smart	Green / APP / Repeat





Original	Replacement	Original	Replacement
 Green/Smart	 Picture / Format		
 Yellow	 Yellow / YouTube / Repeat		
 Blue/Index	 Blue / Prime Video / Random		
 [=i]	 Info / Angle		
 Text	 Text / Goto		
 [=?]	 D.Menu / Top		
 [=◆]	 Zoom / Size		
 [=x]	 TV/Radio /		
 [=o]	 Setup / OPT /		
 [=+]	 AV / Input / RDS		

Original	Replacement

