 



 
 


 
 






 




 


 
 

 
 
 





 







 




 


 




 

 

 



 













Original	Replacement	Original	Replacement
 Standby	 Power	 Stop Rec	 Shift + Stop
 HDD/DVD	 Media	 I<</Prev	 I<<
 Pause Live Tv	 Shift + Pause	 Channel-	 Ch -
 Home Menu	 Smart	 >>I/Next	 >>I
 Info	 Info	 Channel+	 Ch +
 Disc Navigator/Top	 List	 Timer Rec	 Shift + AV
 Guide	 Guide	 Red	 Red
 Up	 Up	 Green	 Green
 Right/CM Skip →	 Right	 Yellow	 Yellow
 Down	 Down	 Blue	 Blue
 Left/CM Back ←	 Left	 A.TV/D.TV	 Options
 Enter	 Ok	 <</<I	 <<
 Pause	 Pause	 >>I/>	 >>
 Return	 Back	 Help	 Exit
 Rec	 Rec	 Tv/DVD	 TV/R
 Play	 Play	 Rec Mode	 Shift + Rec
 Stop	 Stop	 1	 1





Original	Replacement	Original	Replacement
 2	 2		
 3	 3		
 4	 4		
 Audio	 Dual		
 5	 5		
 Subtitle	 Subt		
 6	 6		
 Angle	 3D		
 7	 7		
 8	 8		
 9	 9		
 Play Mode	 Shift + Play		
 0	 0		
 Shift	 Sleep		
 Clear	 Shift + Exit		
 One Touch	 Format		
 Input Select	 AV		

Original	Replacement	Original	Replacement
 Menu	 Menu		
 Display	 Shift + Info		
 Text	 Text		

