



 


 
 


 
 

 










 






 

 
 


 
 


 
 



 

 
 
 
 
 
 

 
 
 
 


 









 
 

 

 


 
 

 












 



 


 
 
 




Original	Replacement	Original	Replacement
 Power	 Power	 PC	 Pre Ch
 Input1	 Shift + 1	 [ II ]	 3D
 Input2	 Shift + 2	 [ < > ]	 Format
 Input3	 Shift + 3	 [ ● ]	 AV
 Input4	 Shift + 4	 P+	 Ch +
 Input5	 Shift + 5	 P-	 Ch -
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	 Mute	 Mute
 4	 4	 Power Source	 Shift + Power
 5	 5	 Return	 Back
 6	 6	 Menu/Home	 Menu
 7	 7	 Exit	 Exit
 8	 8	 Up	 Up
 9	 9	 Down	 Down
 0	 0	 Right	 Right
 [i+]/Info/Timer	 Info	 Left	 Left





Original	Replacement	Original	Replacement
	Enter		Ok
	DVD Top		D. Menu
	Red		Red
	Green		Green
	Yellow		Yellow
	Blue		Blue
	Rec		Rec
	Pause		Pause
	Stop		Stop
	Play		Play
	I<<		I<<
	>>I		>>I
	<<		<<
	>>		>>
	[...]		Subt
	[≡?]		List
	[≡i]		Options
			Text
			Dual
			Smart
			Media

